



# 920DT, 920NL


# FALCON®

D-2001/2008

For (F)19 Series Devices

Installation Instructions

LHR Shown  
RHR Opposite

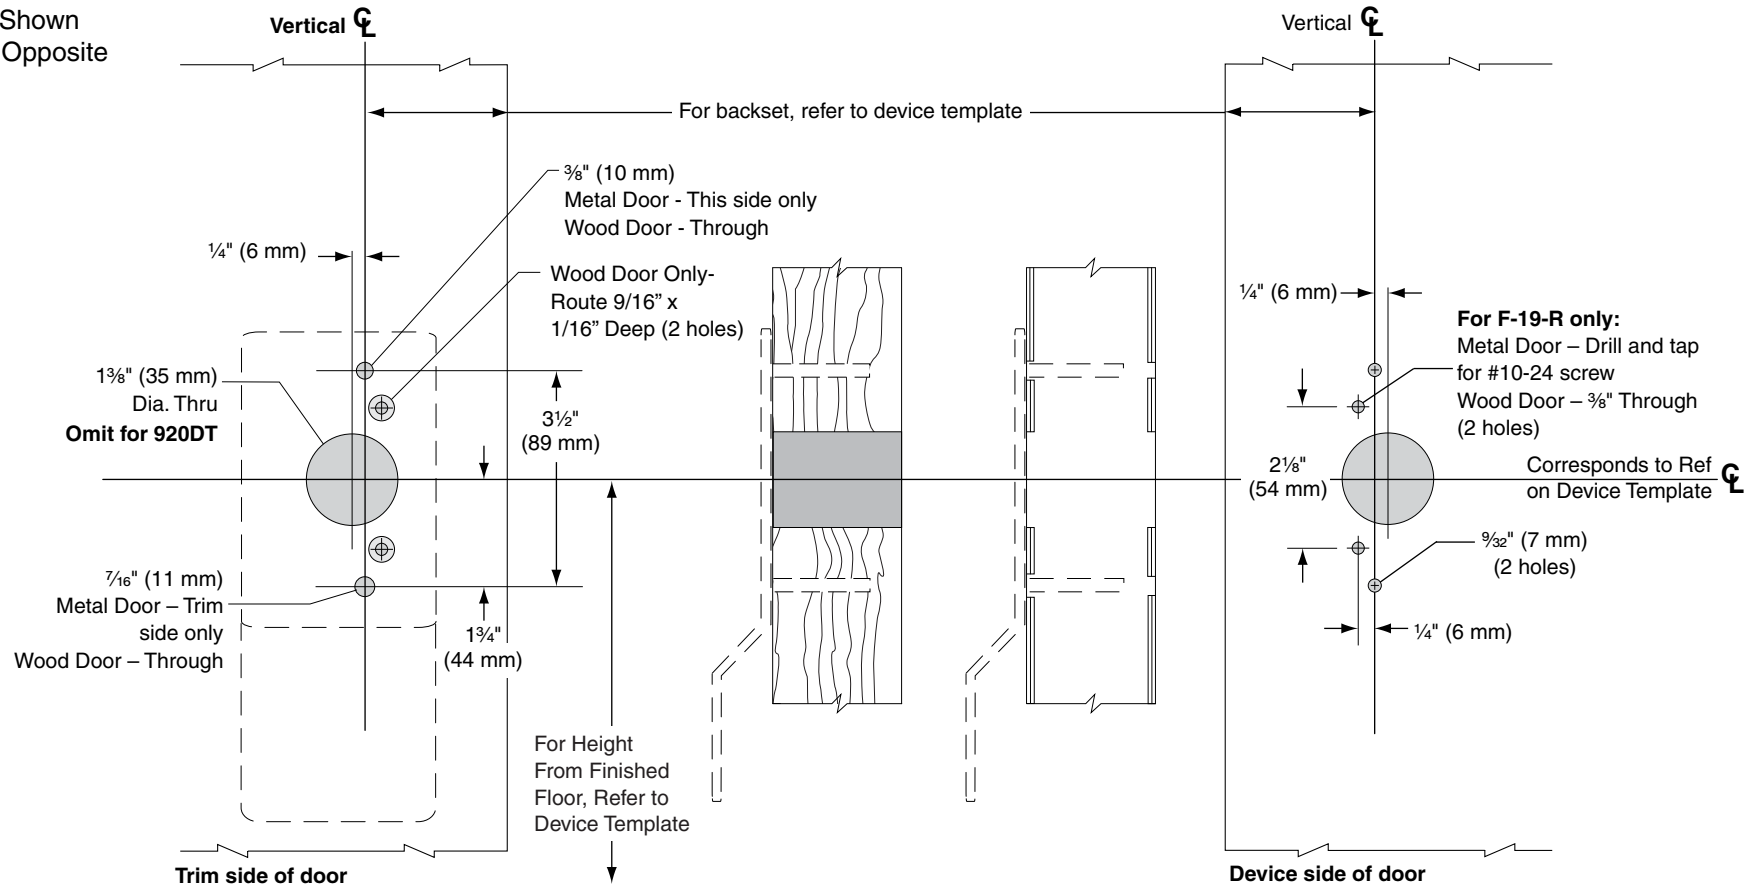

1. Prepare inside face of door for device.
  - A. See device directions for locations of vertical and device ref. centerlines.
2. Prepare outside face of door for trim.
  - A. Transfer vertical and device centerlines from inside face to outside face of door. Be sure vertical centerline is parallel to edge of door.
  - B. Locate and prepare all holes as indicated.
3. Install trim on door.

Customer Service

1-877-671-7011

www.allegion.com/us



© Allegion 2014  
Printed in U.S.A.  
D-2001/2008 Rev. 01/14-b