


25-C Concealed Vertical Rod Centerslide Preparation

Panic Devices - Wood Door, LHR Shown, RHR Opposite

Device Side Prep when using

510 / 511 / 512 Trim

This page only

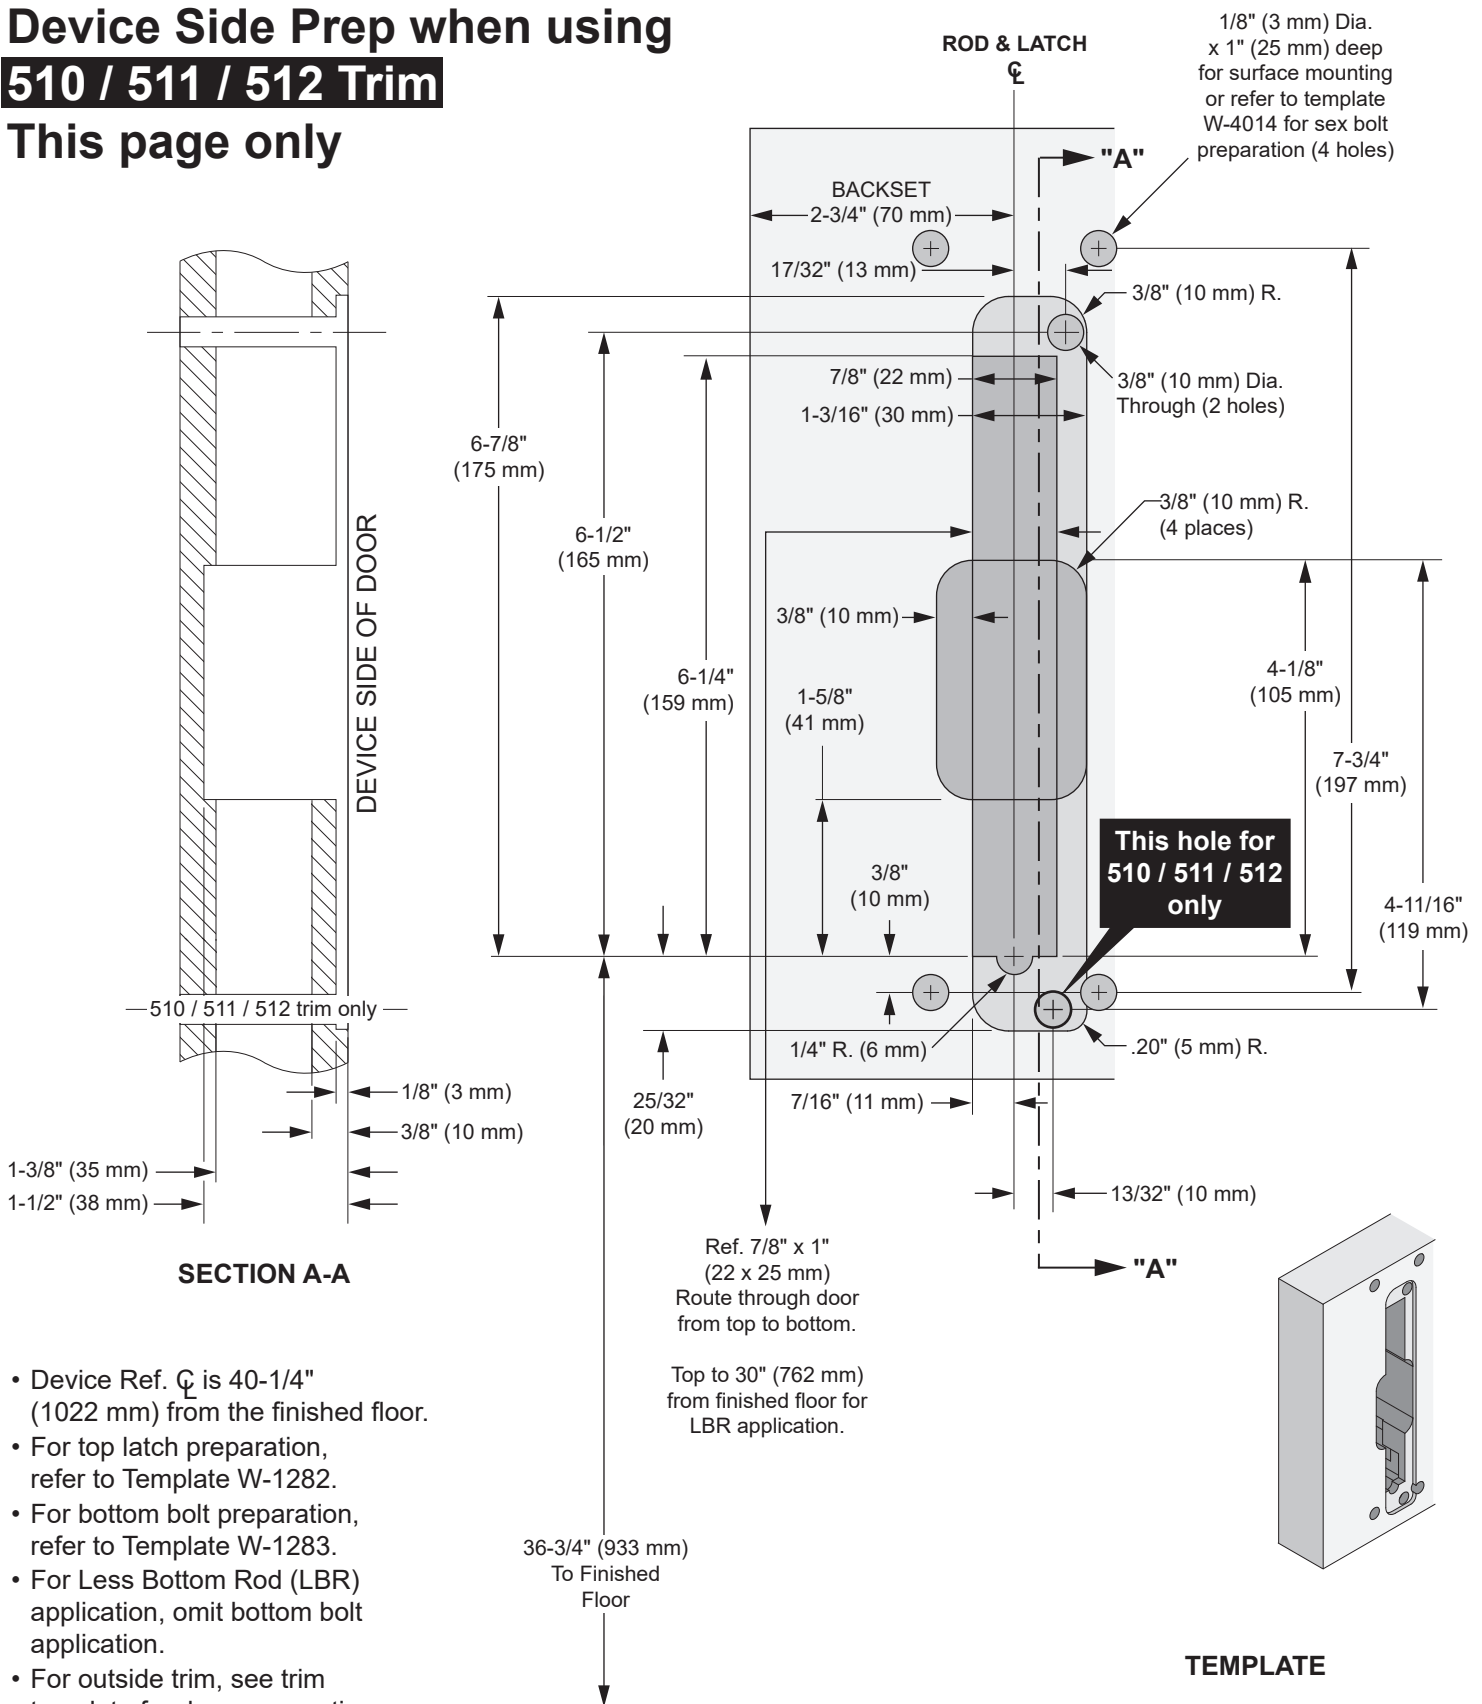

- Device Ref. \varnothing is 40-1/4" (1022 mm) from the finished floor.
- For top latch preparation, refer to Template W-1282.
- For bottom bolt preparation, refer to Template W-1283.
- For Less Bottom Rod (LBR) application, omit bottom bolt application.
- For outside trim, see trim template for door preparation.


25-C Concealed Vertical Rod Centerslide Preparation

Panic Devices - Wood Door, LHR Shown, RHR Opposite

Device Side Prep when using

718C Trim

This page only

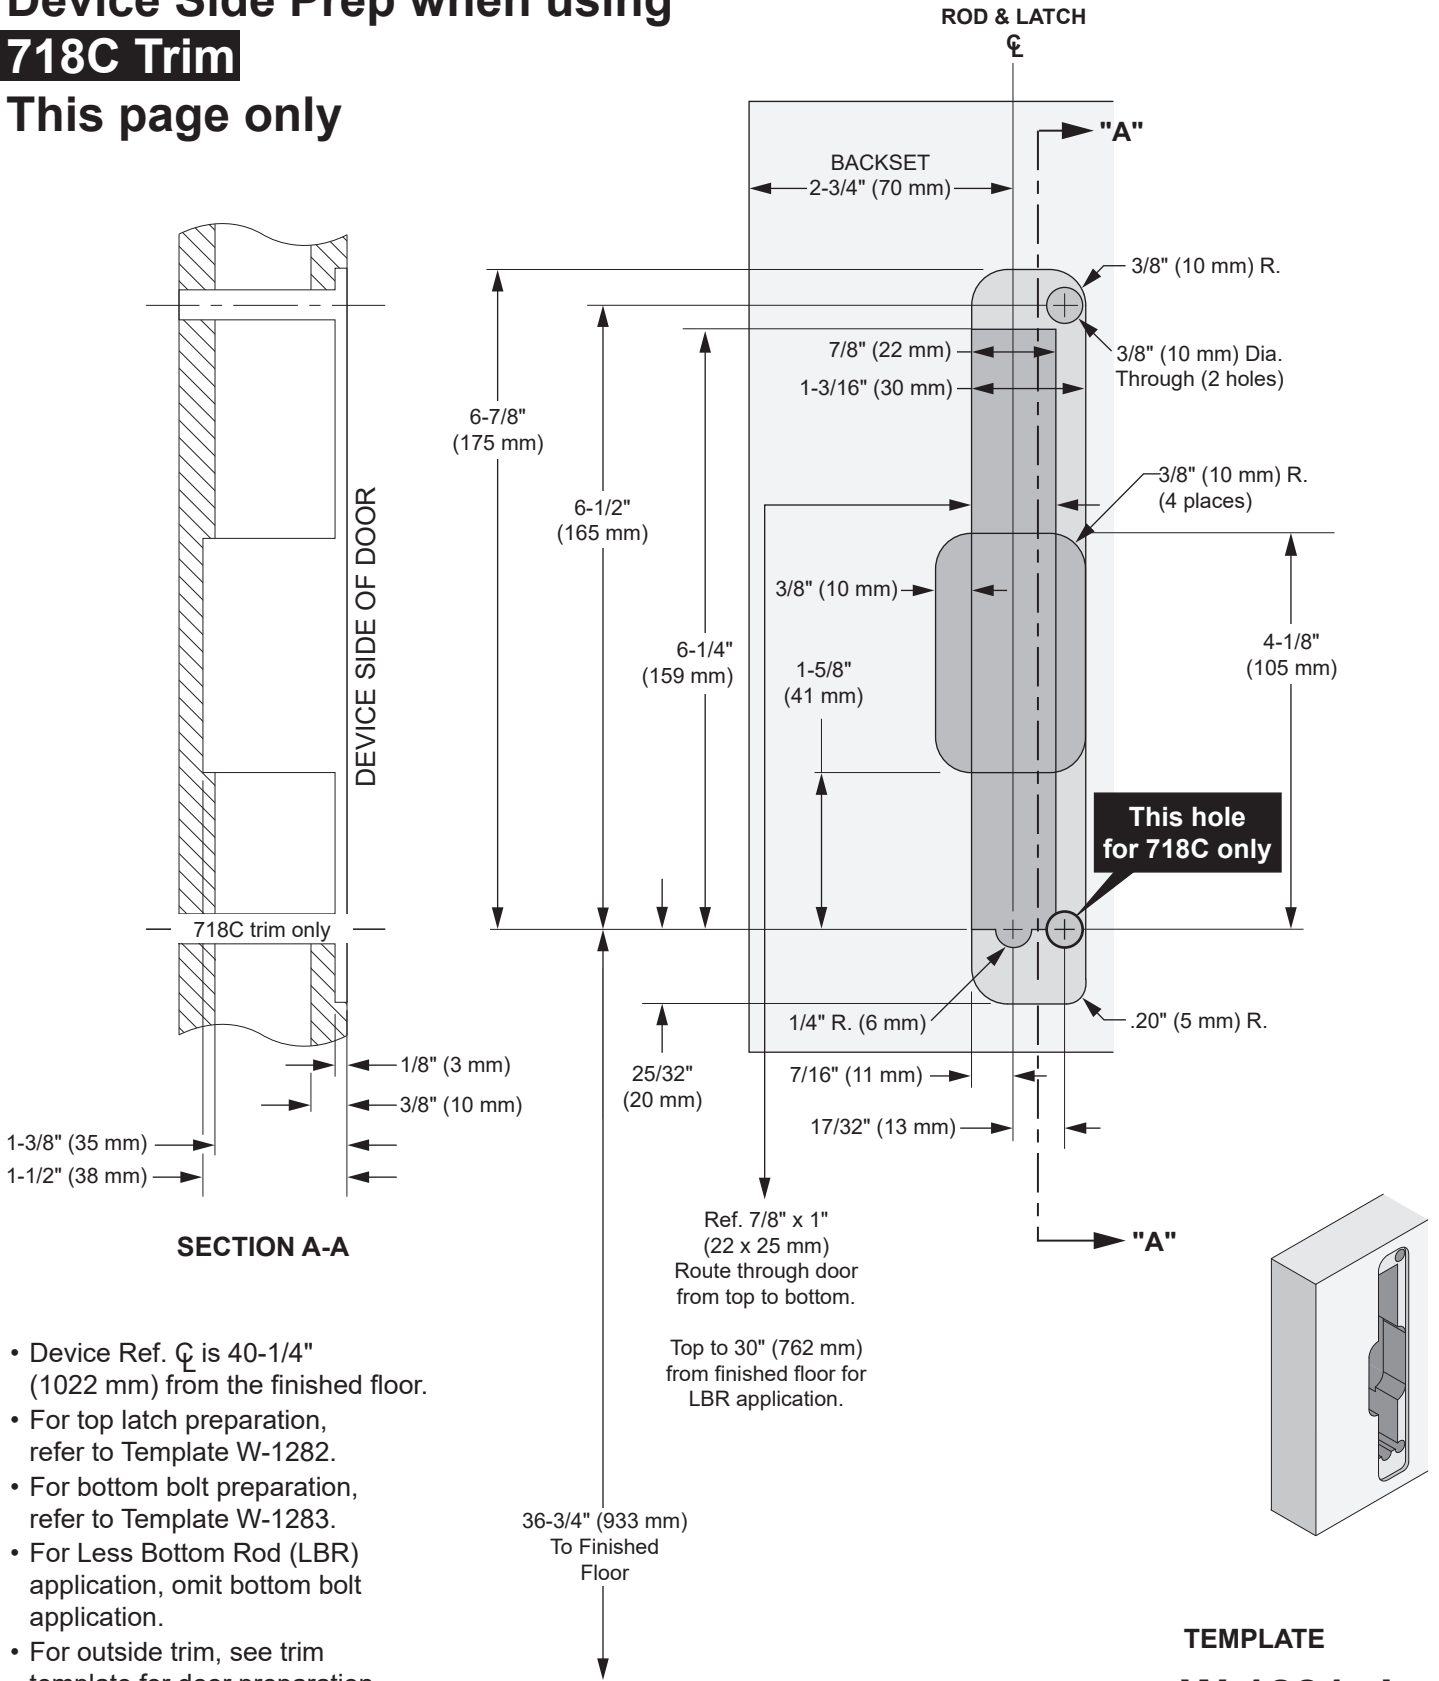

- Device Ref. \varnothing is 40-1/4" (1022 mm) from the finished floor.
- For top latch preparation, refer to Template W-1282.
- For bottom bolt preparation, refer to Template W-1283.
- For Less Bottom Rod (LBR) application, omit bottom bolt application.
- For outside trim, see trim template for door preparation.