



T-Series Tailpiece

FALCON®

030102


For proper function of the lock, the right tailpiece must be used and installed correctly.

All T-locks with standard cylinders must have the tailpiece installed
VERTICALLY on the cylinder as shown.

NOTE: The cap must be properly adjusted.


If too loose, excessive plug end play will prevent the key from being withdrawn.

If too tight, the plug will drag and be difficult to rotate with the key.

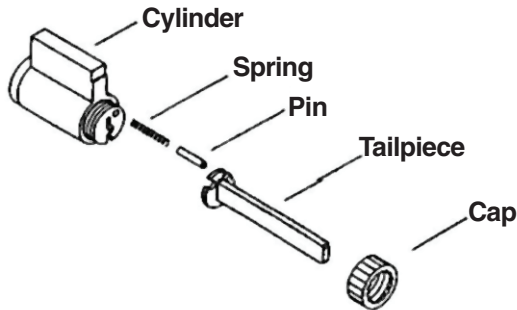

ALLEGION

© Allegion 2014
Printed in U.S.A.
030102 Rev. 01/14-d

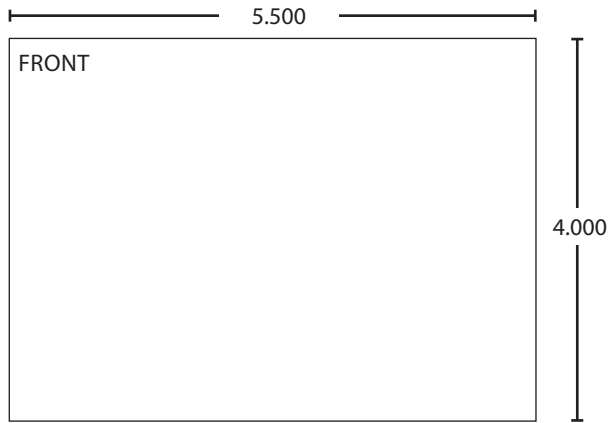

Additional Notes:
1. None

Revision History						Revision Description: D > Revised artwork				
A	B	C	D	E	F					
4600-264	0790									
Material White Paper						Edited By	Approved By	EC Number	Release Date	
						D. Spence	M. Sasso	043034	01-01-14	
Notes 1. printed one side 2. printed black 3. tolerance $\pm .13$ 4. printed in country may vary 5. drawings not to scale						Title Installation Instructions, S & X				
						Creation Date 12-18-2013	Number 030102		Revision D	
						Created By D. Spence	Activity 3899 Hancock Expwy Security, CO 80911			
						Software: InDesign CS6				© Allegion 2014