

NOTES:


1. Fold on dotted line.
2. Place fold on low edge of bevel.
3. Line up ☞ **mortise lock** with centerline of mortise lock cutout on door.
4. Center punch for appropriate holes.
5. Drill holes.

**HL6T-7500 VERTICAL & HORIZONTAL
PADDLE MOUNTING TEMPLATE**

GLYNN-JOHNSON

TEMPLATE NUMBER: 829364-00_c PG1

DATE: 06-01-16

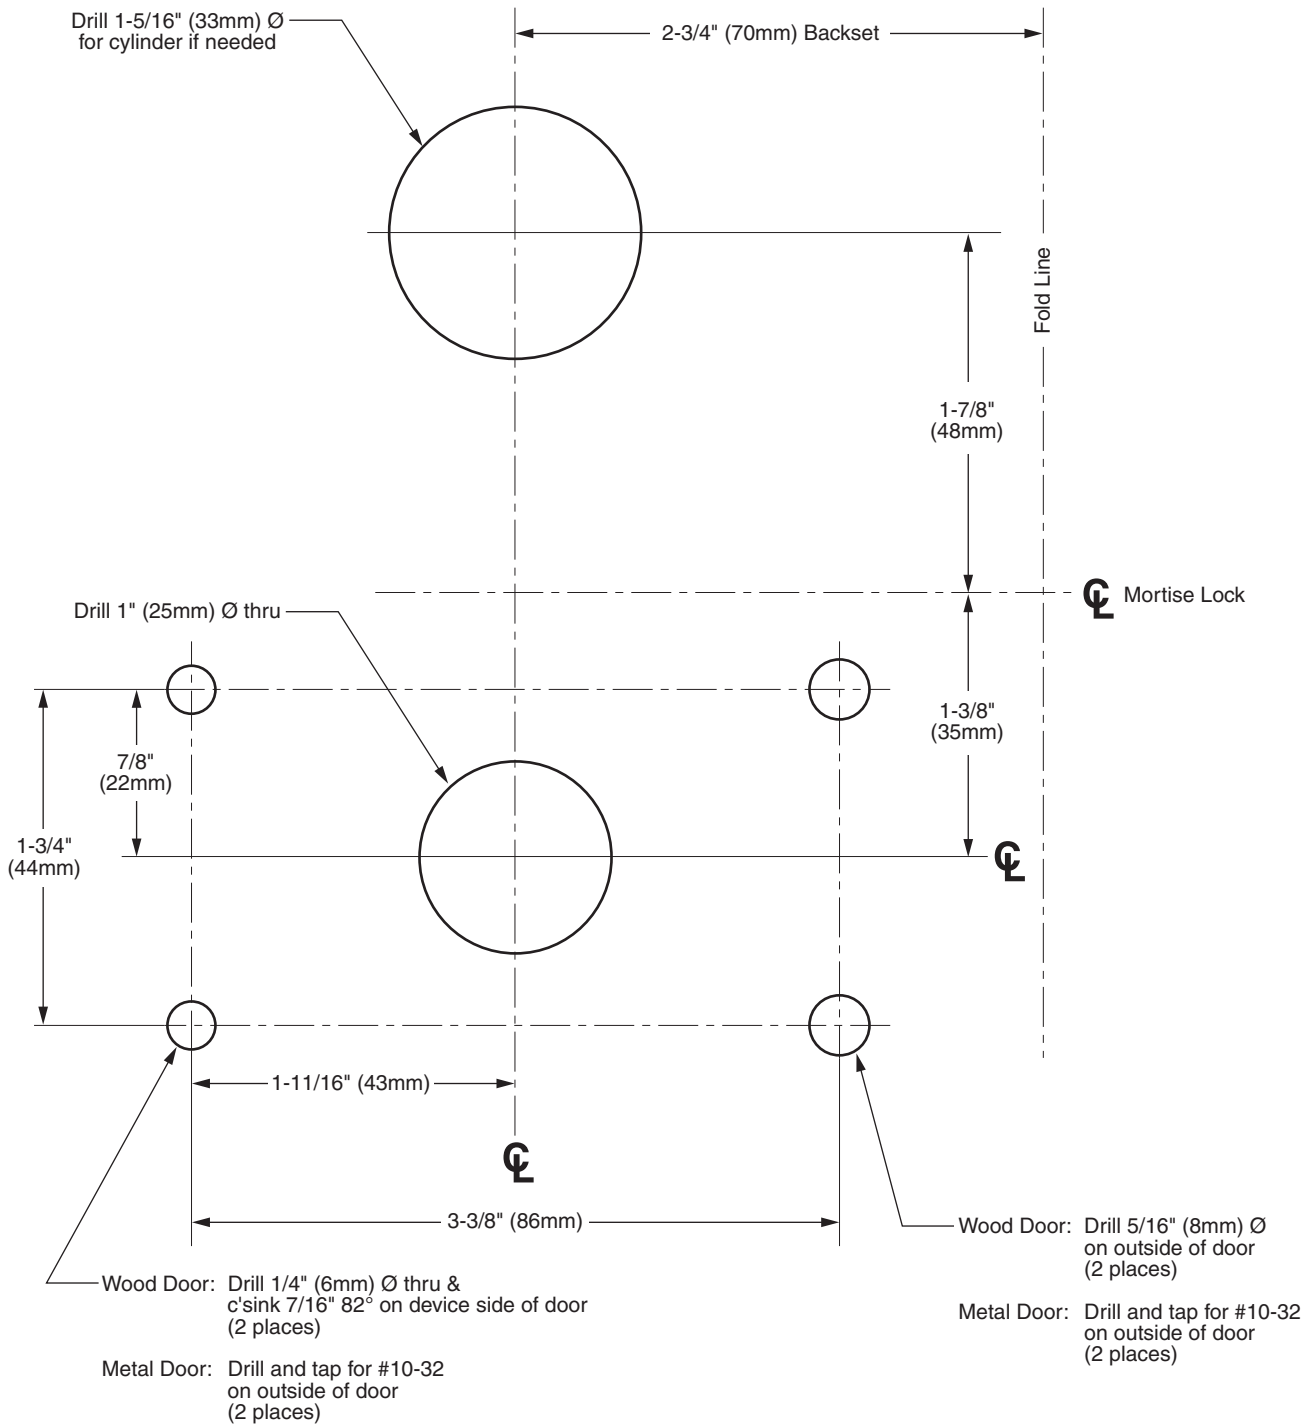

NOTES:

1. Fold on dotted line.
2. Place fold on edge of bevel.
3. Line up **☞ mortise lock** with centerline of mortise lock cutout on door.
4. Center punch for appropriate holes.
5. Drill holes.

HL6T-7500 VERTICAL & HORIZONTAL PADDLE MOUNTING TEMPLATE

GLYNN-JOHNSON