




48348372

SB360-WS


IVES

Windstorm-Rated Surface Bolt Installation


Parts Included

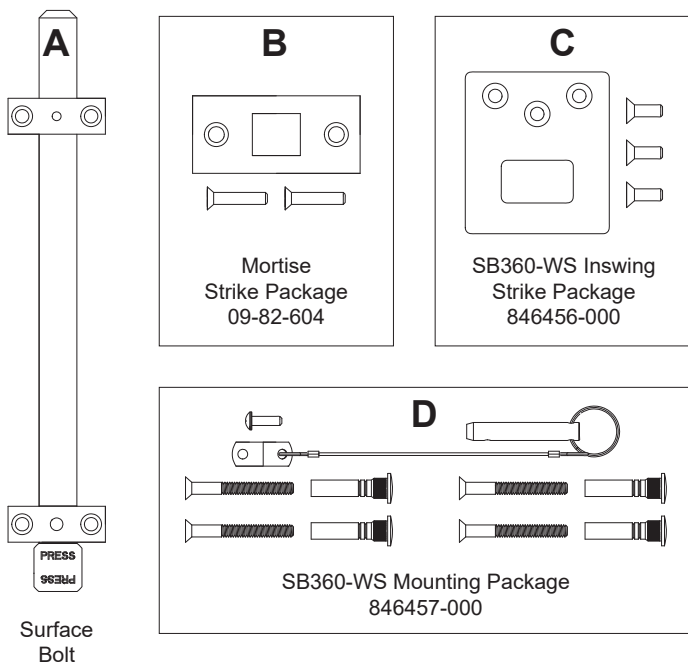

2 Using Strike Position for Centerline, Mark and Prepare Door.

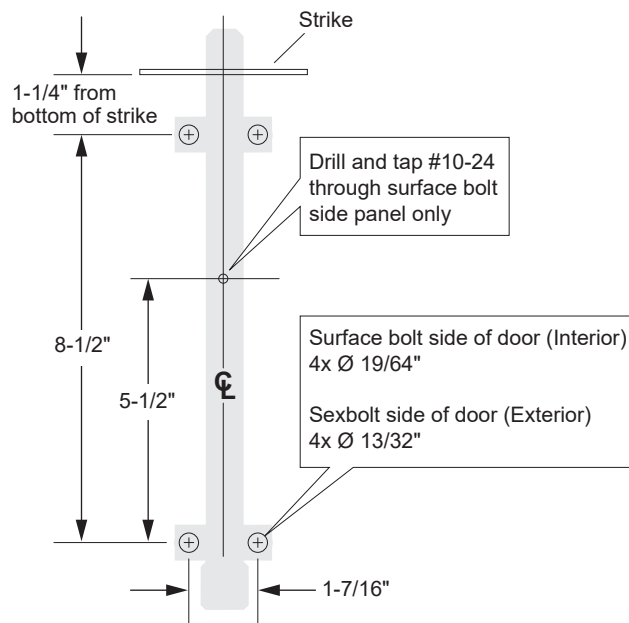

3 Mount Lanyard.

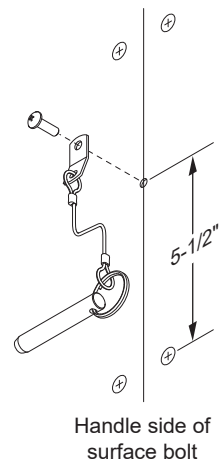


Surface Bolt Application	Parts Used			
Inswing Top	A		C	D
Outswing Top	A	B		D
Inswing/Outswing Bottom	A	B		D


Inswing Top	Pages 1-2
Outswing Top	Pages 2-3
Inswing/Outswing Bottom	Pages 3-4

Inswing Top

1 Install Strike.

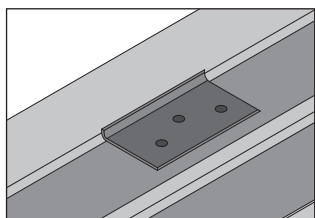


Soffit should be pre-prepped for strike.

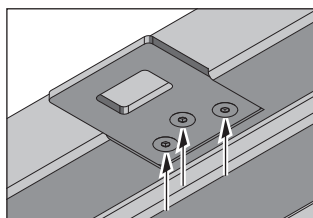

Install (3) supplied flathead screws to mount strike.


4

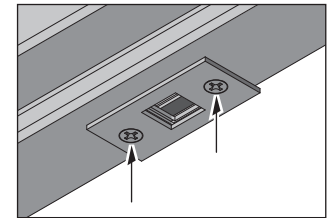


Technical drawing of a door edge showing dimensions and hardware locations:

- Strike:** Indicated at the top of the door edge.
- 1-1/4" from bottom of strike:** Dimension indicating the distance from the bottom of the strike to the first set of bolts.
- 8-1/2" / 5-1/2" / 1-7/16":** Vertical dimensions indicating the spacing between the bolt sets.
- Drill and tap #10-24 through surface bolt side panel only:** Callout for the top bolt set.
- Surface bolt side of door (Interior) 4x Ø 19/64":** Callout for the middle bolt set.
- Sexbolt side of door (Exterior) 4x Ø 13/32":** Callout for the bottom bolt set.


3 Mount Lanyard.

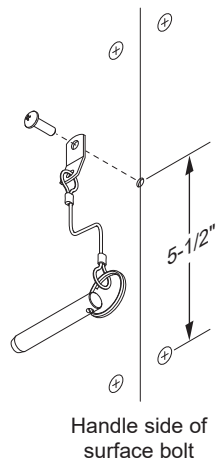

4 Install Surface Bolt.

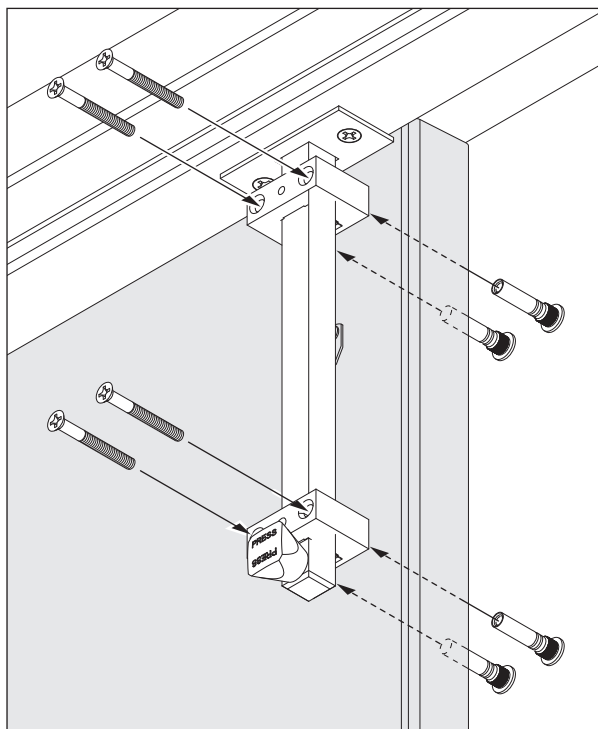


5 Insert Pin.

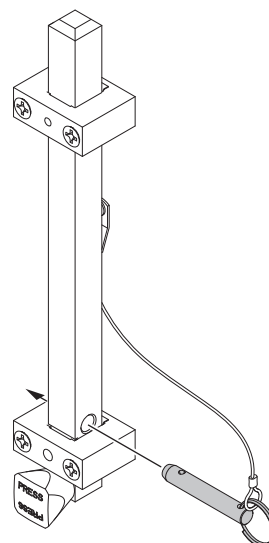


Inswing/Outswing Bottom


1 Install Strike.

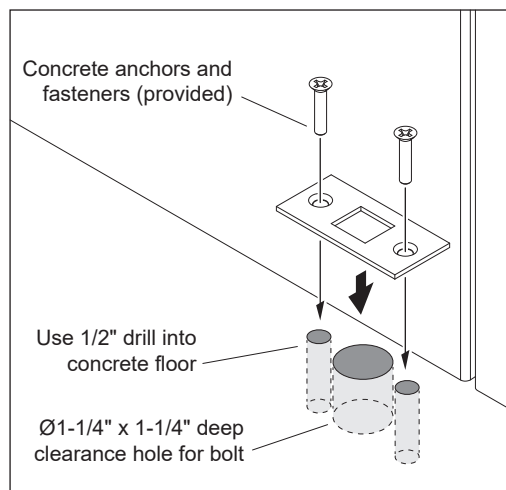


2 Using Strike Position for Centerline, Mark and Prepare Door.

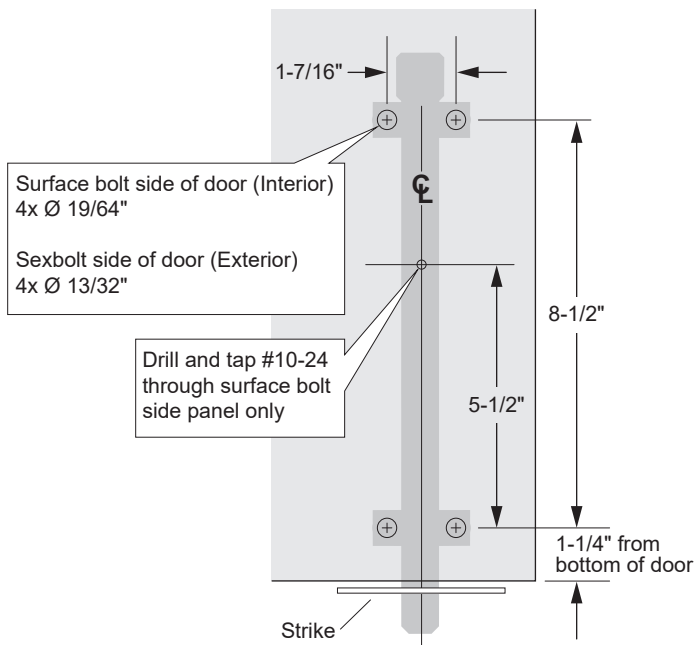


3 Mount Lanyard.

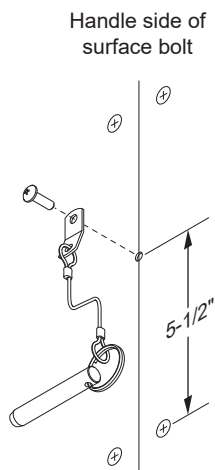

4 Install Surface Bolt.

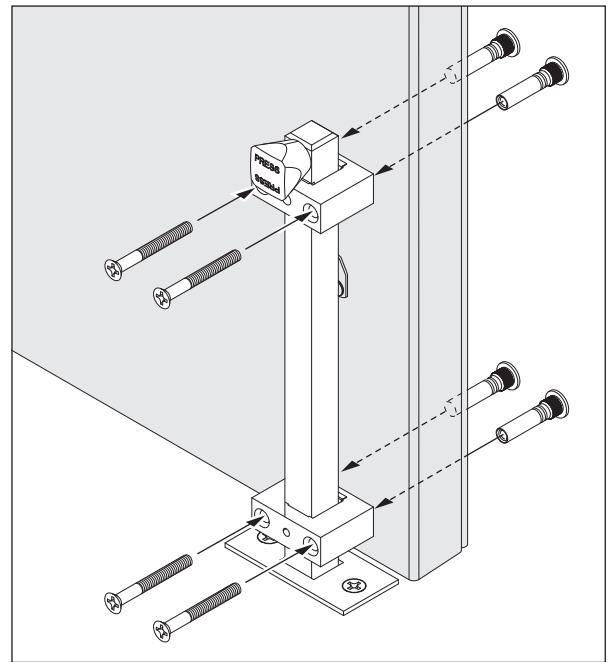

5 Insert Pin.

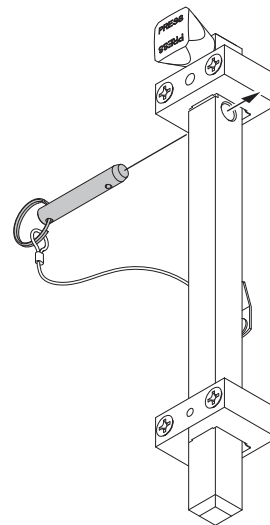

Customer Service

1-877-671-7011 www.allegion.com/us



© Allegion 2025
Printed in U.S.A.
48348372 Rev. 06/25-a