



AD Series Door Template Index



Cylindrical Lock

[\(Wood Door\) AD-CY Cylindrical AD200/250/300/400 Template - AD101](#)

[\(Metal Door\) AD-CY Cylindrical AD200/250/300/400 Template - AD102](#)

Mortise Lock

[\(Wood Door\) AD-MS Mortise AD200/250/300/400 Template - AD103](#)

[\(Metal Door\) AD-MS Mortise AD200/250/300/400 Template - AD104](#)

Mortise Deadbolt Lock

[\(Wood Door\) AD-MD Mortise Deadbolt AD200/250/300/400 Template - AD105](#)

[\(Metal Door\) AD-MD Mortise Deadbolt AD200/250/300/400 Template - AD106](#)

993R/S Rim & Surface Vertical Exit Device Trim

[\(Wood Door\) AD-993R/S Exit Device AD200/250/300/400 Template - AD107](#)

[\(Metal Door\) AD-993R/S Exit Device AD200/250/300/400 Template - AD108](#)

993M Mortise Exit Device Trim

[\(Wood Door\) AD-993M Exit Device AD200/250/300/400 Template - AD109](#)

[\(Metal Door\) AD-993M Exit Device AD200/250/300/400 Template - AD110](#)

993R Concealed Vertical Exit Device Trim

[\(Metal Door\) AD-993R Exit Device AD200/250/300/400 Template - AD112](#)

993R/S Rim and Surface Vertical Exit Device Dummy Trim

[\(Wood Door\) AD-993R/S Exit, Dummy AD200/250/300/400 Template - AD113](#)

[\(Metal Door\) AD-993R/S Exit, Dummy AD200/250/300/400 Template - AD114](#)



[Return to Index](#)



AD-Series

Models AD-200/250/300/400-CY

Door Type: Wood or Composite, Flat or Beveled
Door Thickness: 1-3/8," (35 mm) – 2-3/4," (70 mm)
Faceplate: Square Corner, 1-1/8," (29 mm) wide
Backsets: 2-3/4," (70 mm), 2-3/8," (60 mm), 3-3/4," (95 mm), 5-3/4," (146 mm)


DPS Only: 3/4" (19) Dia. Hole
1-1/2" (38) Deep

Frame rabbet to receive same
DPS prep in field

Ensure alignment with door
and frame DPS preps

DPS templating not necessary
with Less DPS Option

**For Strike
dimensions,
see Templates
J918, J919,
J928, and J929**

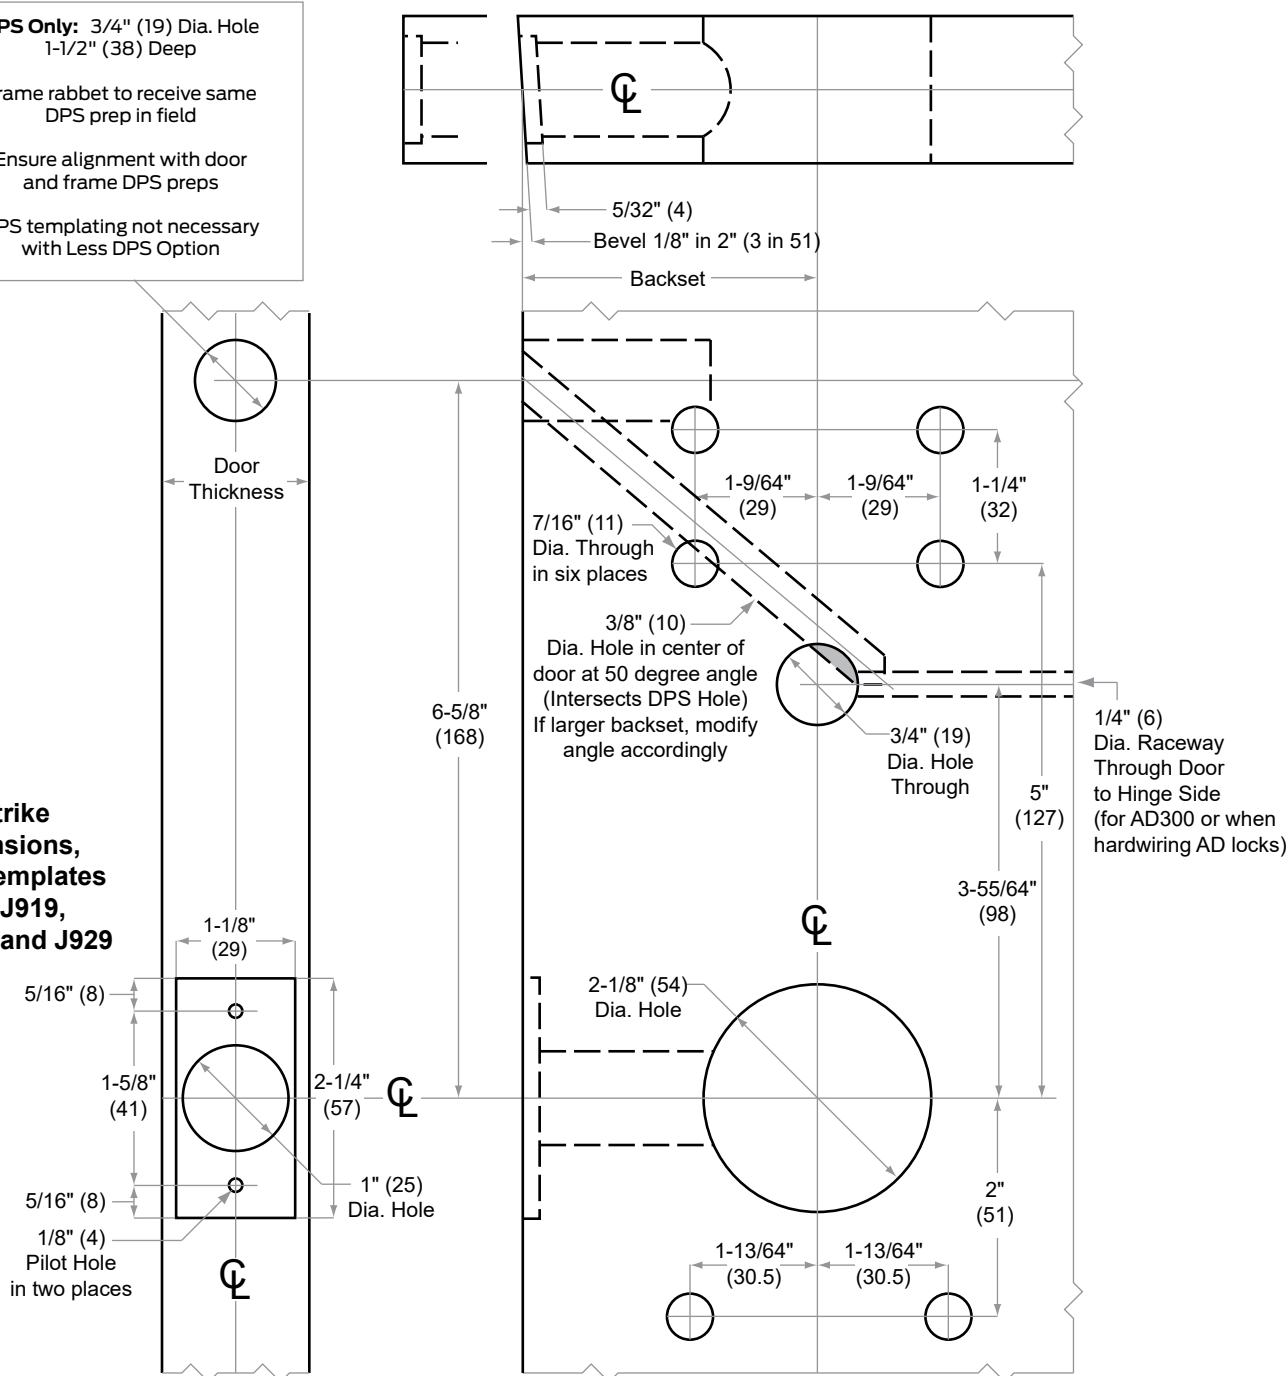

Dimensions shown in parentheses () are in millimeters.

Door preparation template




[Return to Index](#)



AD-Series

Models AD-200/250/300/400-CY

Door Type: Metal, Flat or Beveled Conforms to ANSI BHMA A156.115
Door Thickness: 1-3/8," (35 mm) – 2-3/4" (70 mm)
Faceplate: Square Corner, 1-1/8," (29 mm) wide
Backsets: 2-3/4" (70 mm), 2-3/8," (60 mm), 3-3/4" (95 mm), 5-3/4" (146 mm)

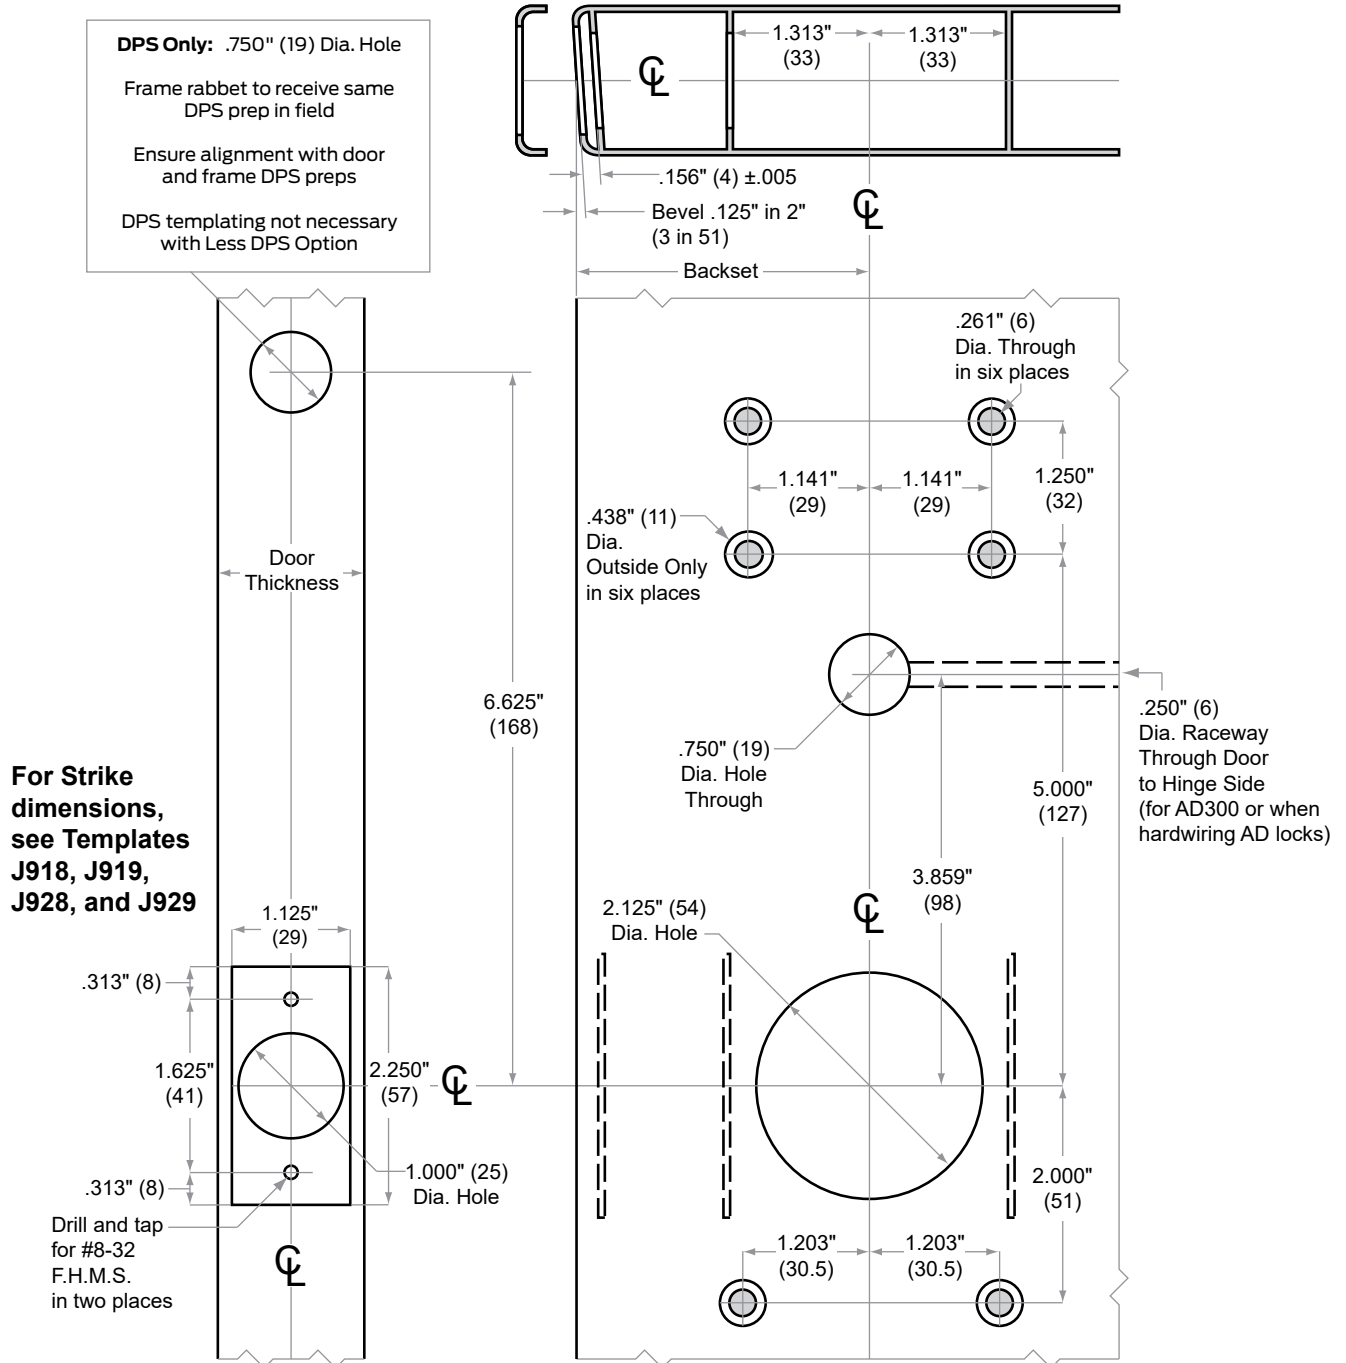

Dimensions shown in parentheses () are in millimeters.

Door preparation template


AD-Series

Models AD-200/250/300/400-MS

Door Type: Wood or Composite, Flat or Beveled Conforms to ANSI BHMA A156.115-W
 Door Thickness: 1-3/8," (35 mm) – 2-3/4" (70 mm)
 Faceplate: Square Corner, 1-1/16," (27 mm) or 1-1/4" (32 mm) wide
 Backsets: 2-3/4" (70 mm)

For Mortise Case Dimensions, see Template L1
For Mortise Strike Dimensions, see Templates J918, J919, and J557

Left Hand (LH) Door Shown

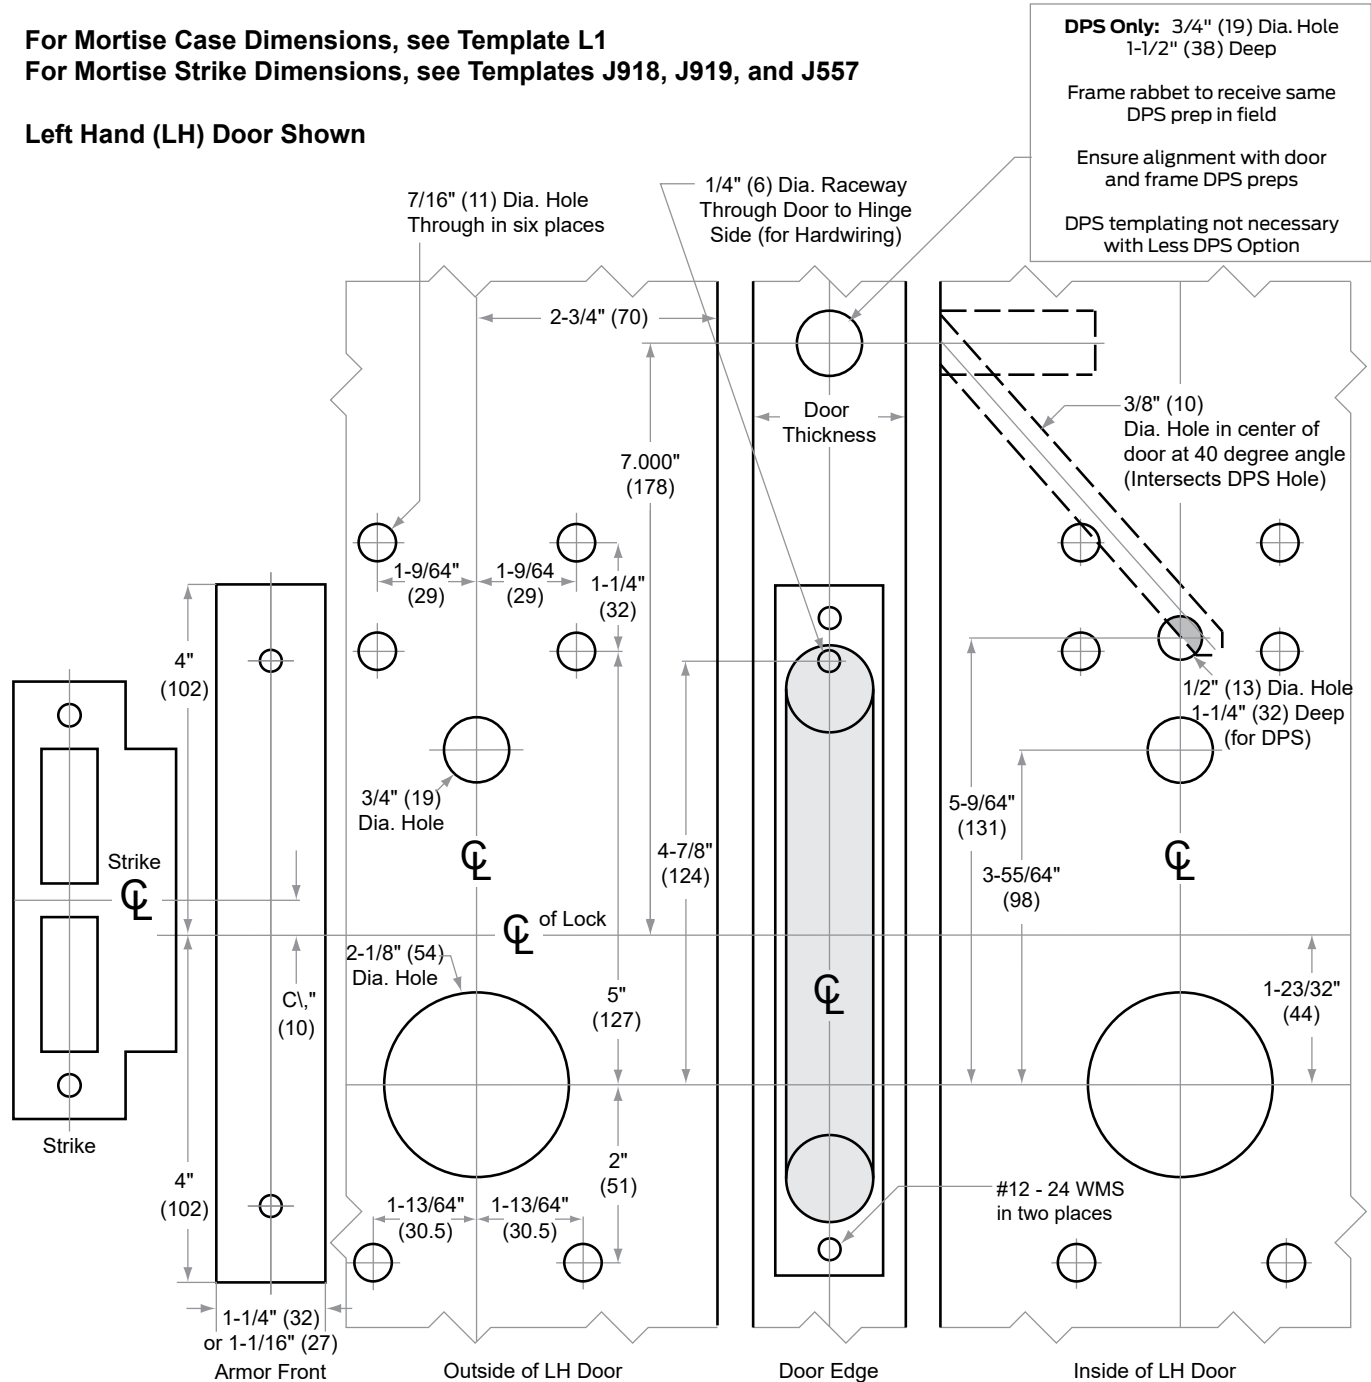

Dimensions shown in parentheses () are in millimeters.

Door preparation template

AD103



[Return to Index](#)



AD-Series


Models AD-200/250/300/400-MS

Door Type: Metal, Flat or Beveled Conforms to ANSI BHMA A156.115
Door Thickness: 1-3/8," (35 mm) – 2-3/4" (70 mm)
Faceplate: Square Corner, 1-1/16," (27 mm) or 1-1/4" (32 mm) wide
Backsets: 2-3/4" (70 mm)

For Mortise Case Dimensions, see Template L1

For Mortise Strike Dimensions, see Templates J918, J919, and J557

Left Hand (LH) Door Shown

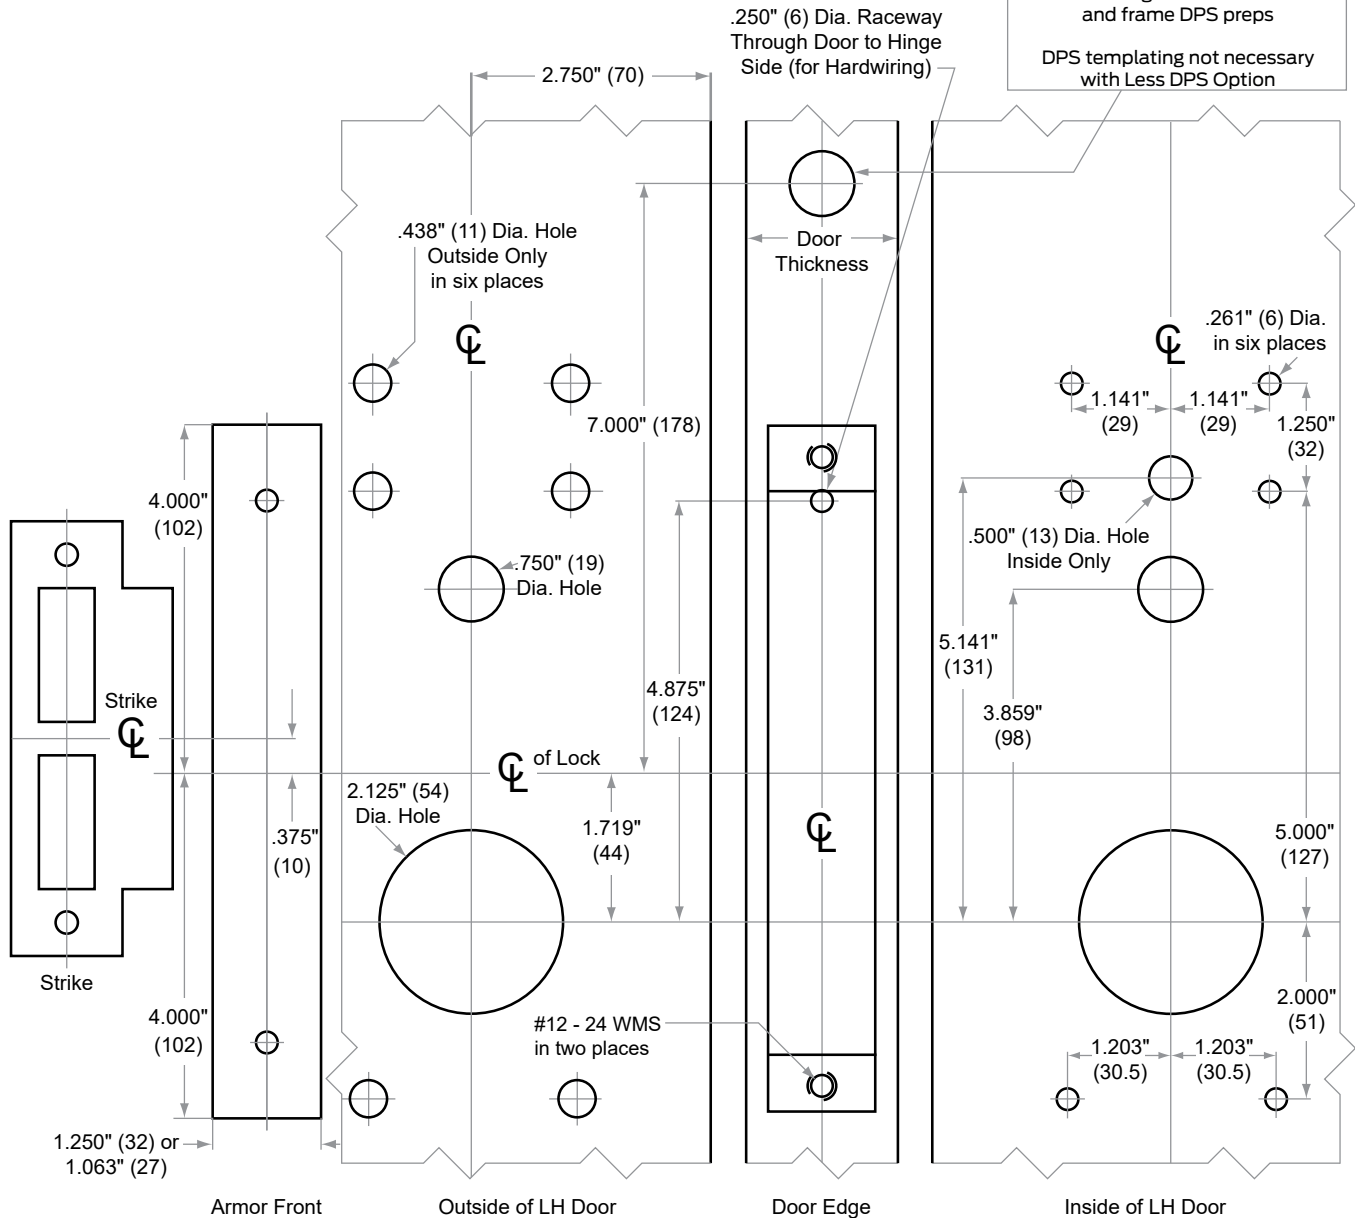

Dimensions shown in parentheses () are in millimeters.

Door preparation template

AD-Series

Models AD-200/250/300/400-MD

Door Type: Wood or Composite, Flat or Beveled Conforms to ANSI BHMA A156.115-W

Door Thickness: 1-3/8," (35 mm) – 2-3/4" (70 mm)


Faceplate: Square Corner, 1-1/16," (27 mm) or 1-1/4" (32 mm) wide

Backsets: 2-3/4" (70 mm)

For Mortise Case Dimensions, see Template L1

For Mortise Strike Dimensions, see Templates J918, J919, and J557

Left Hand (LH) Door Shown

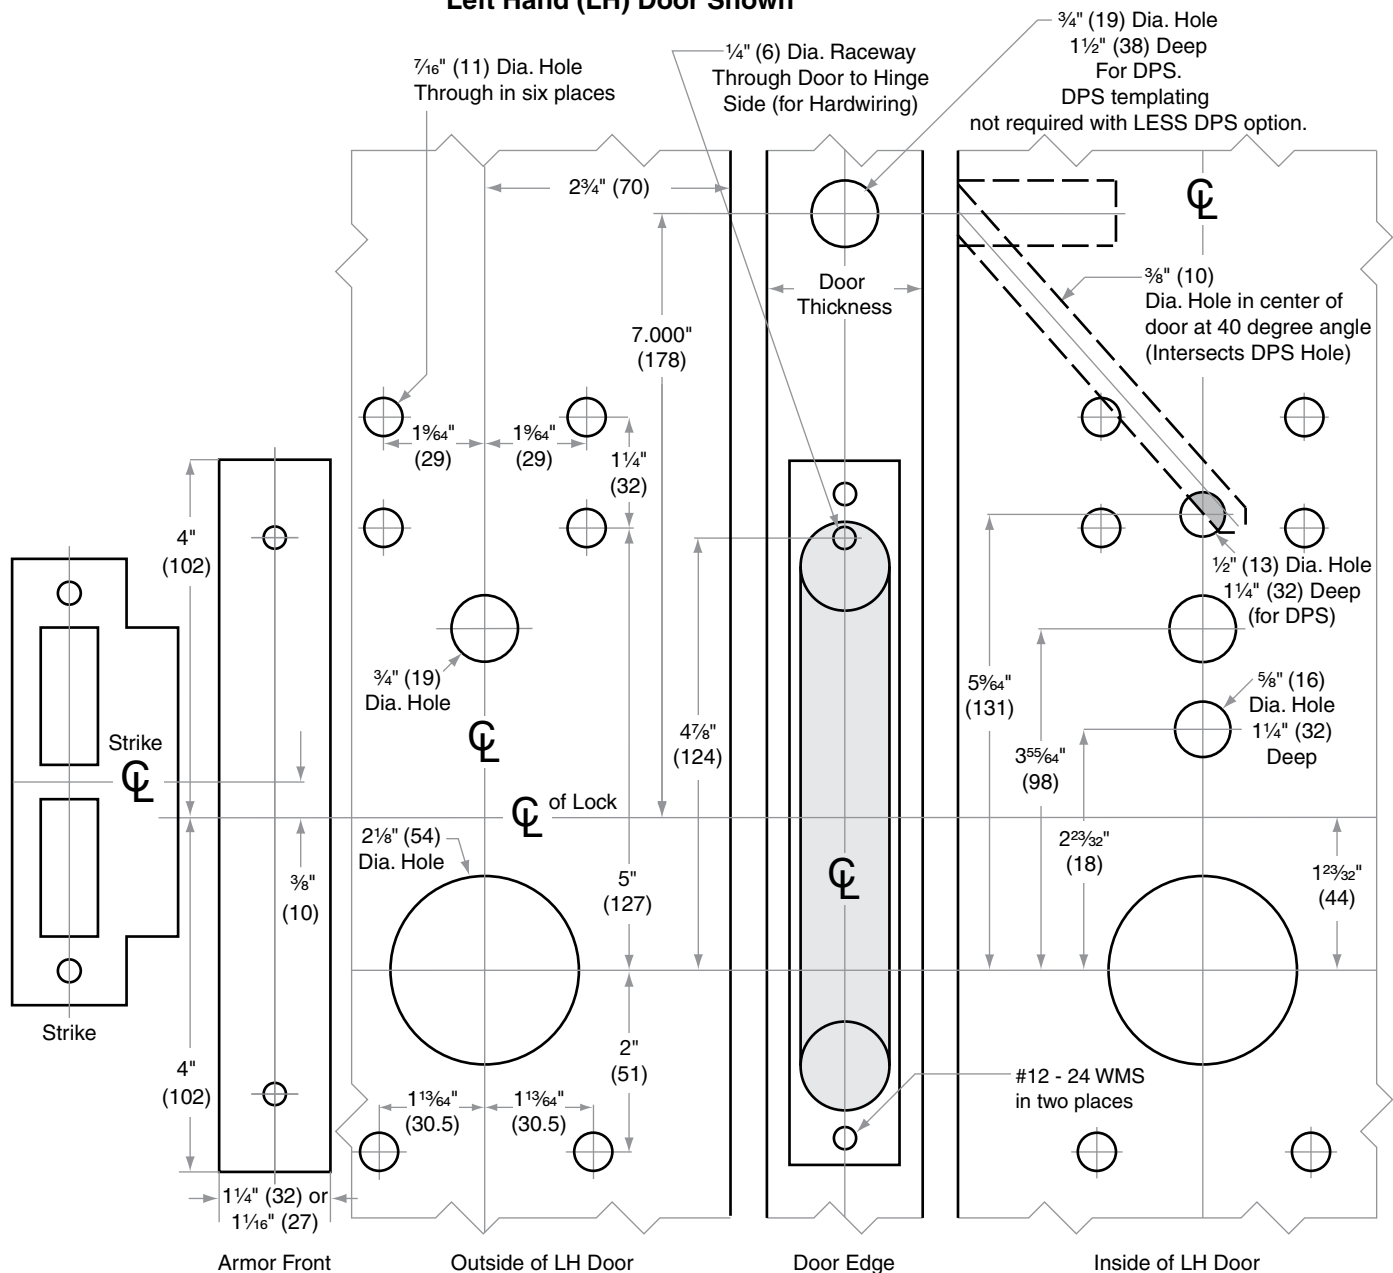

Dimensions shown in parentheses () are in millimeters.

Door preparation template

AD105



[Return to Index](#)



AD-Series


Models AD-200/250/300/400-MD

Door Type: Metal, Flat or Beveled Conforms to ANSI BHMA A156.115
Door Thickness: 1-3/8," (35 mm) – 2-3/4" (70 mm)
Faceplate: Square Corner, 1-1/16," (27 mm) or 1-1/4" (32 mm) wide
Backsets: 2-3/4" (70 mm)

For Mortise Case Dimensions, see Template L1

For Mortise Strike Dimensions, see Templates J918, J919, and J557

Left Hand (LH) Door Shown

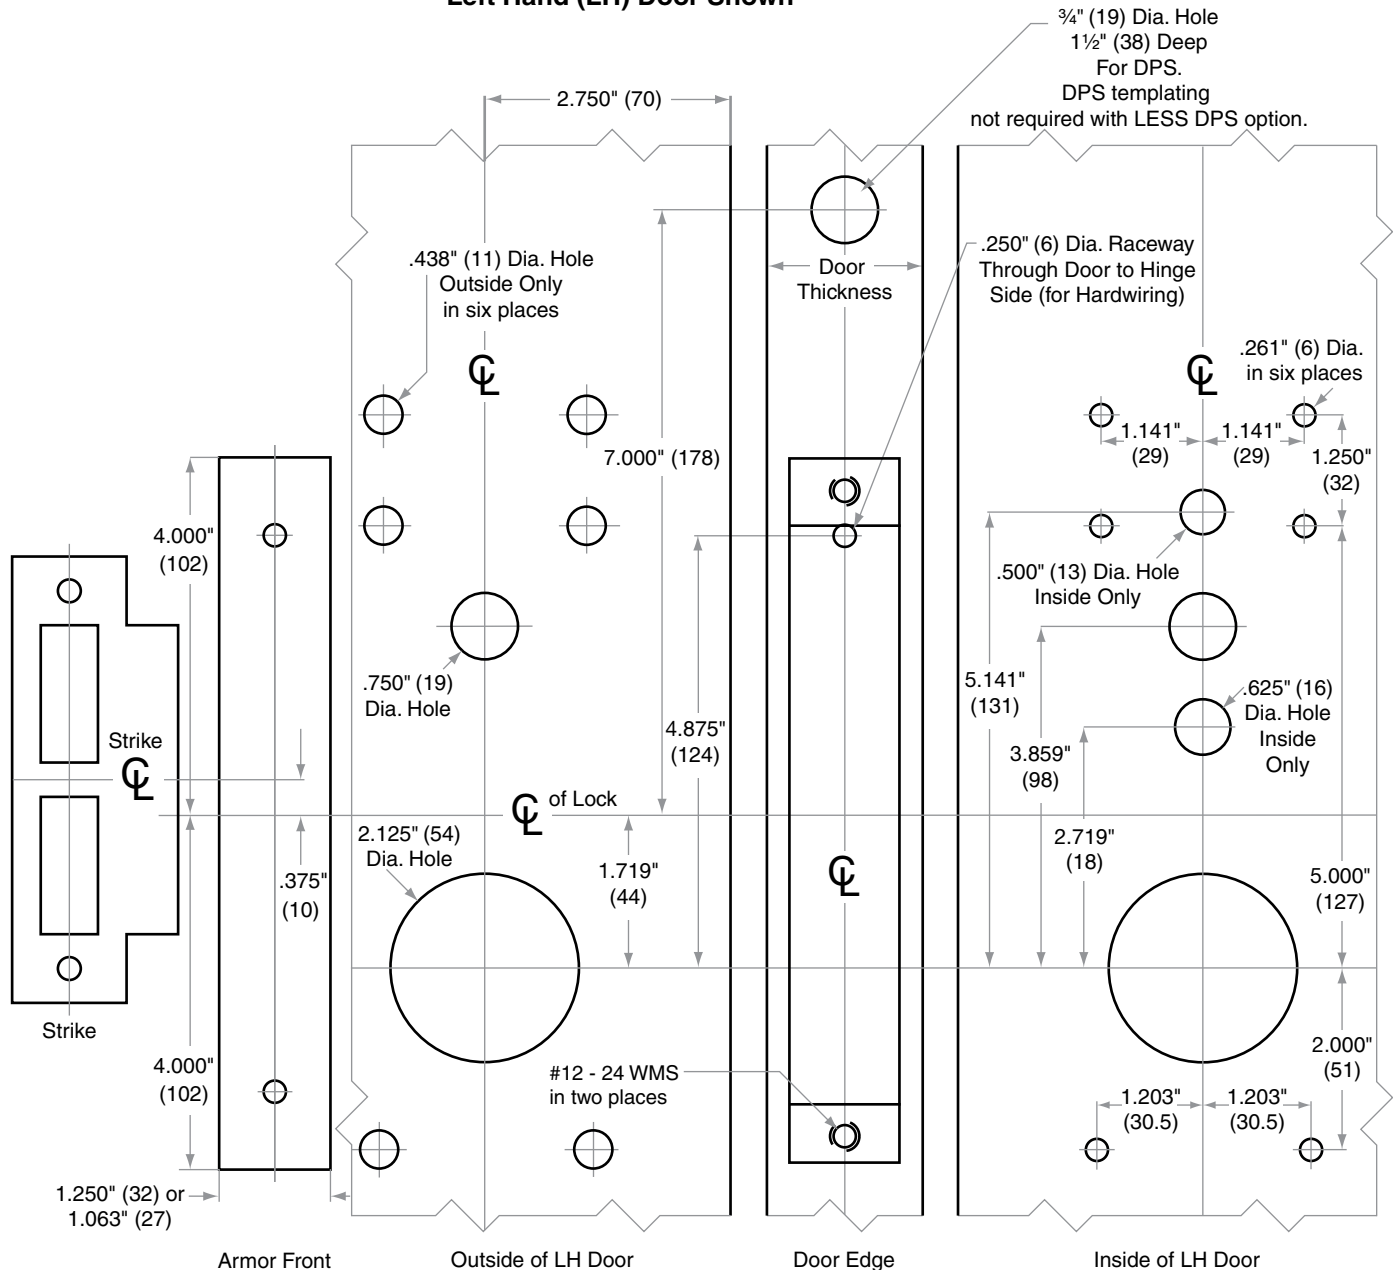

Dimensions shown in parentheses () are in millimeters.

Door preparation template




[Return to Index](#)



AD-Series

Models AD-200/250/300/400-993R/S

Door Type: Wood Exit Devices: Rim, Surface Vertical
Door Thickness: 1-3/8" (44 mm) – 2-3/4" (70 mm)
Faceplate: None
Backsets: Various

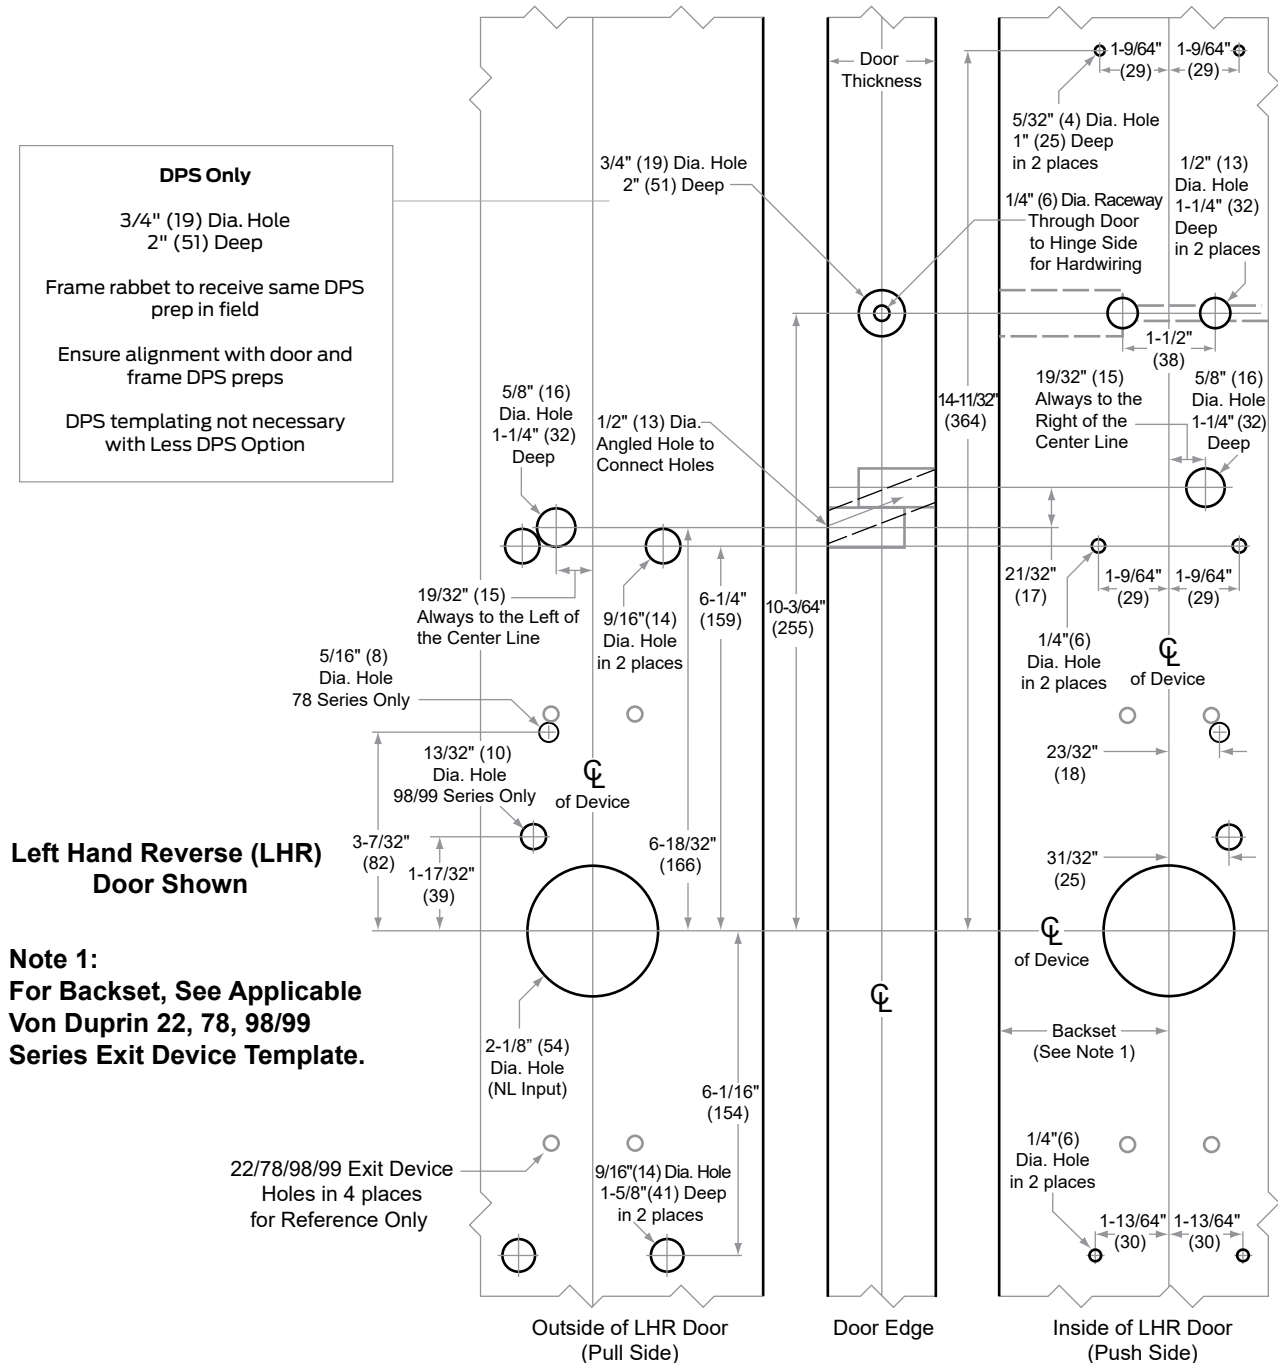

Dimensions shown in parentheses () are in millimeters.

Door preparation template

AD-Series


Models AD-200/250/300/400-993R/S

Door Type: Metal Exit Devices: Rim, Surface Vertical

Door Thickness: 1-3/8" (44 mm) – 2-3/4" (70 mm)

Faceplate: None

Backsets: Various

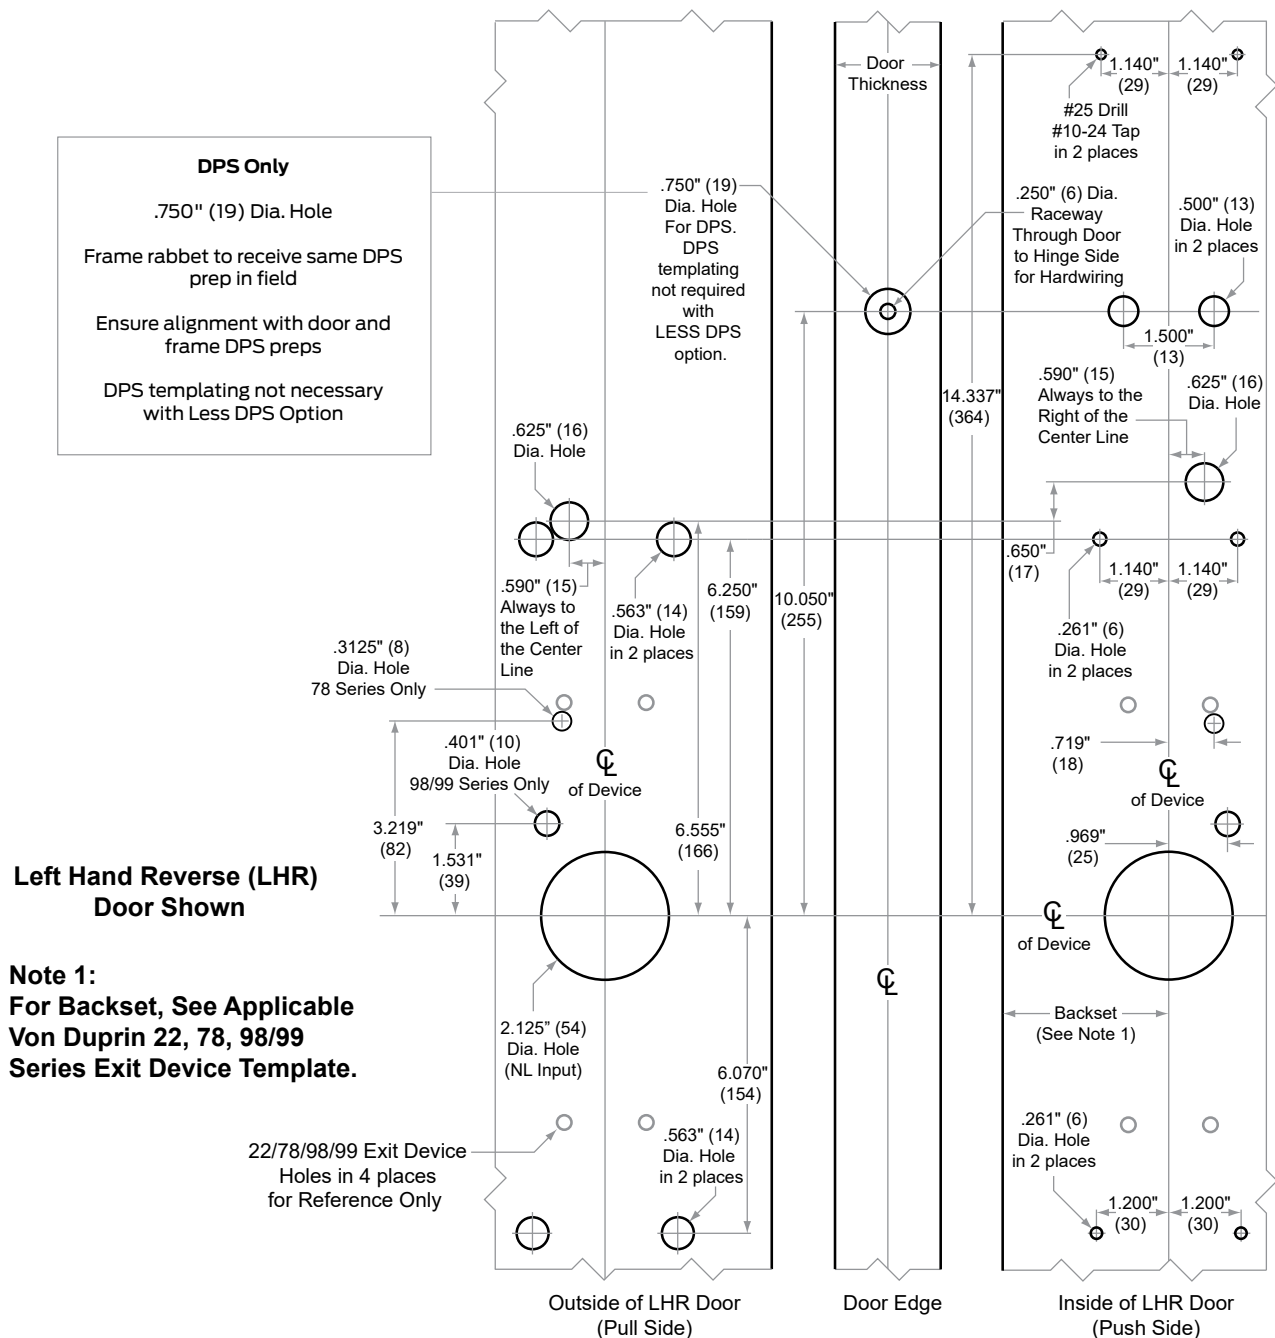

Dimensions shown in parentheses () are in millimeters.


Door preparation template

AD108

AD-Series

Models AD-200/250/300/400-993M

Door Type: Wood Exit Devices: Mortise
Door Thickness: 1-3/8" (44 mm) – 2-3/4" (70 mm)
Faceplate: None
Backsets: Various

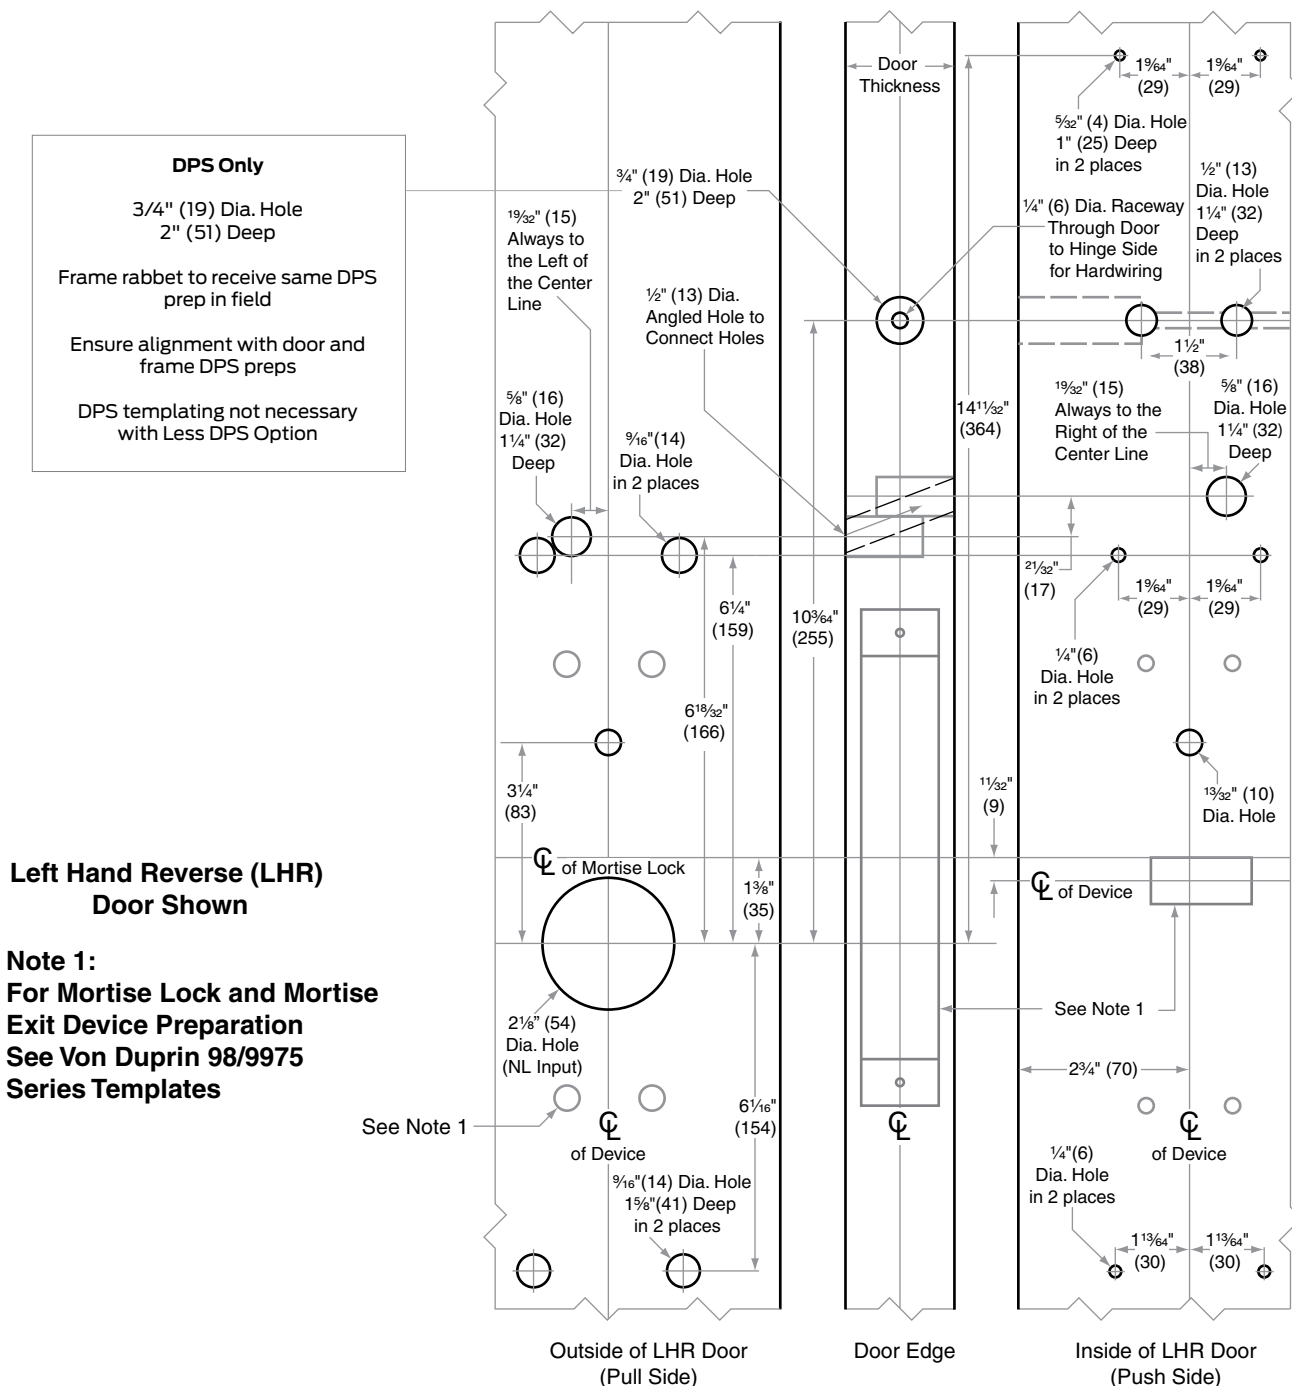

Dimensions shown in parentheses () are in millimeters.


Door preparation template

AD109

AD-Series

Models AD-200/250/300/400-993M

Door Type: Metal Exit Devices: Mortise
Door Thickness: 1-3/8" (44 mm) – 2-3/4" (70 mm)
Faceplate: None
Backsets: Various

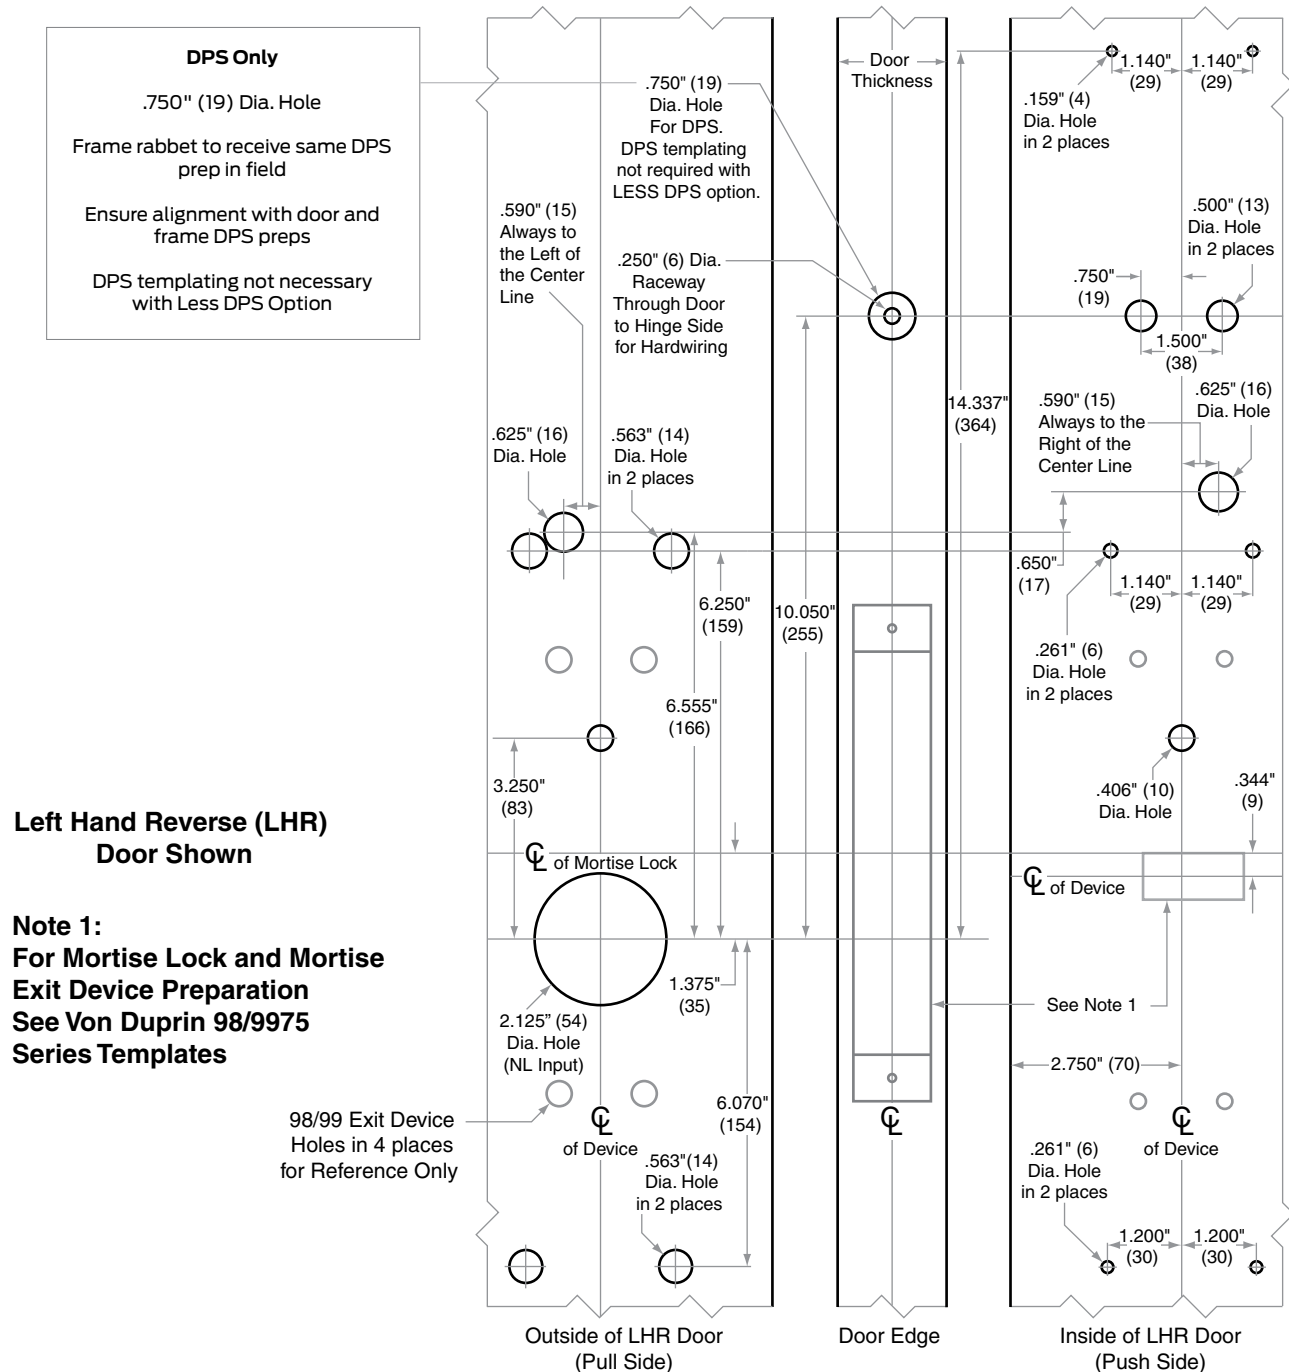

Dimensions shown in parentheses () are in millimeters.

Door preparation template

AD110




[Return to Index](#)



AD-Series

Models AD-200/250/300/400-993R

Door Type: Metal Exit Devices: Concealed Vertical
Door Thickness: 1-3/8" (44 mm) – 2-3/4" (70 mm)
Faceplate: None
Backsets: Various

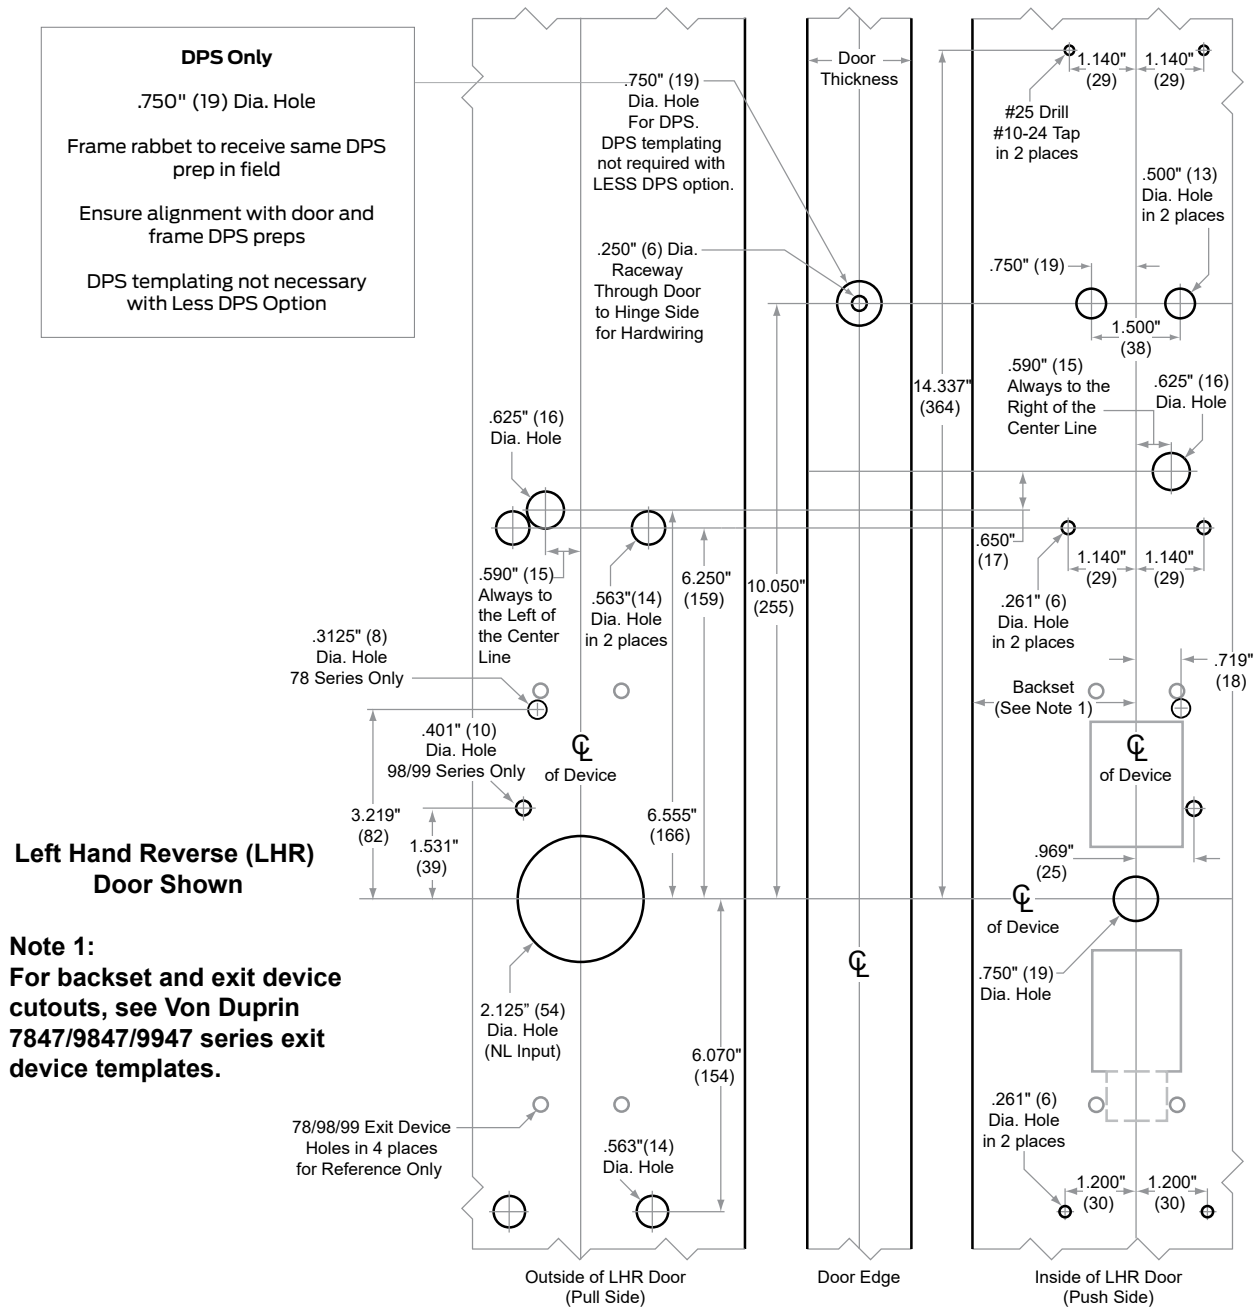

Dimensions shown in parentheses () are in millimeters.

Door preparation template



[Return to Index](#)



AD-Series

Models AD-993LLL, AD-993-DT

Door Type: Wood, Exit Devices: Dummy Trim less Reader or Dummy Trim with Dummy Reader cover for Exit Rim, Concealed Vertical Cable, Concealed Vertical Rod, Surface Vertical Rod or Mortise


Door Thickness: 1-3/8" (44 mm) – 2-3/4" (70 mm)

Faceplate: None

Backsets: Various

Left Hand Reverse (LHR) Door Shown

Note 1:
For Backset, See Applicable
Von Duprin 98-R/99-R,
9827/9927, 22-R, or 2227
Series Exit Device Template.

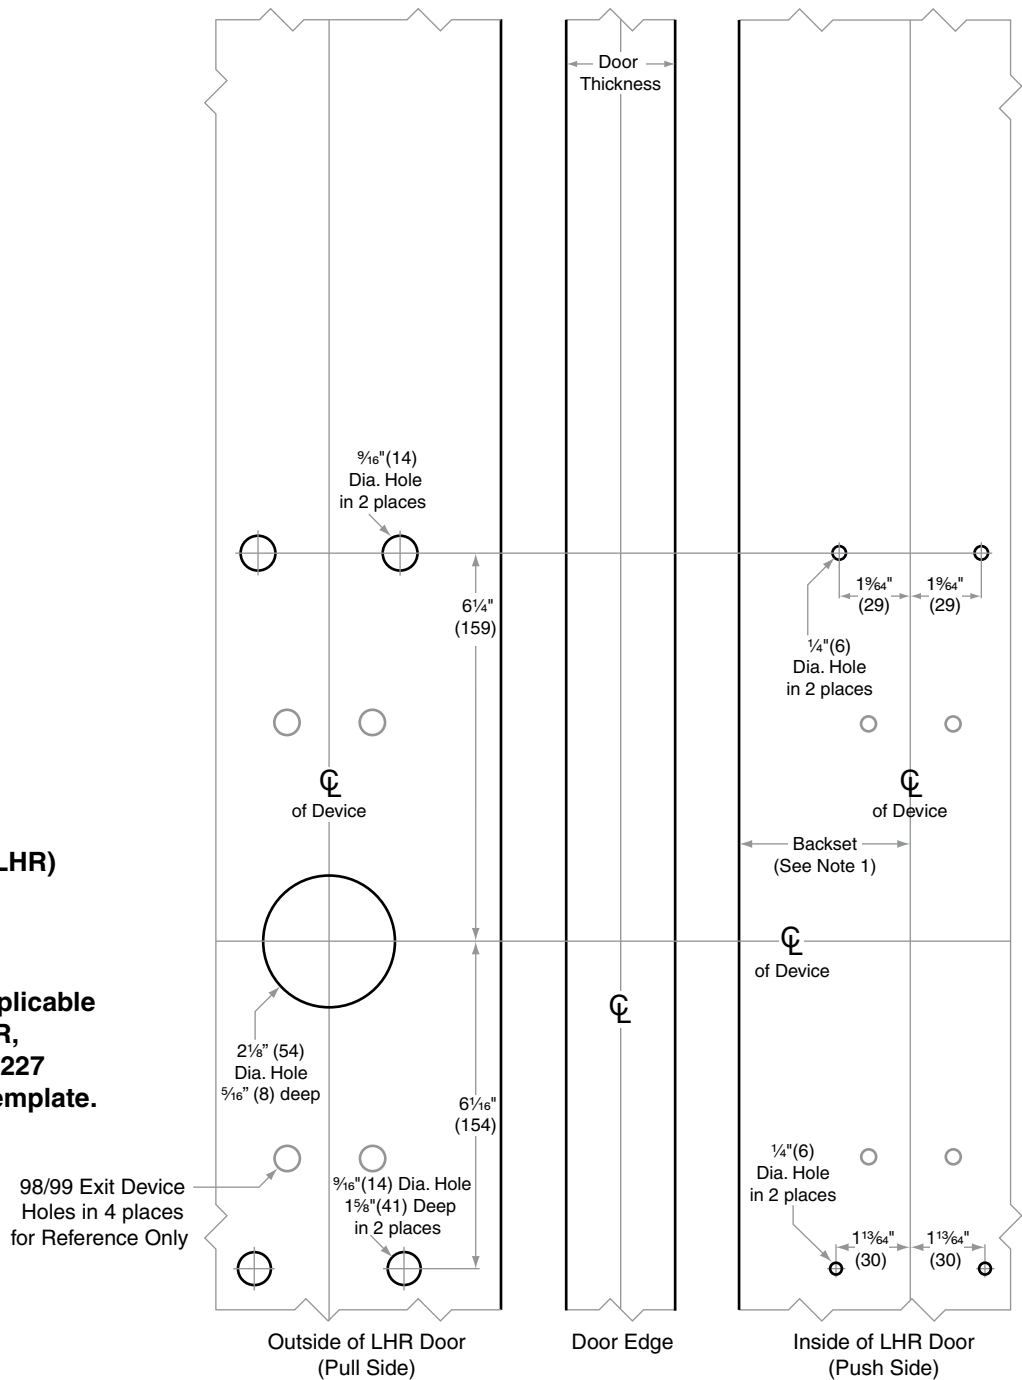

Dimensions shown in parentheses () are in millimeters.

Door preparation template



[Return to Index](#)



AD-Series

Models AD-993LLL, AD-993-DT

Door Type: Metal, Exit Devices: Dummy Trim less Reader or Dummy Trim with Dummy Reader cover for Exit Rim, Concealed Vertical Cable, Concealed Vertical Rod, Surface Vertical Rod or Mortise

Door Thickness: 1-3/8" (44 mm) – 2-3/4" (70 mm)


Faceplate: None

Backsets: Various

Left Hand Reverse (LHR) Door Shown

Note 1:
**For Backset, See Applicable
Von Duprin 98-R/99-R,
9827/9927, 22-R, or 2227
Series Exit Device Template.**

* For metal door with core,
drill 0.3125" (8 mm) deep.

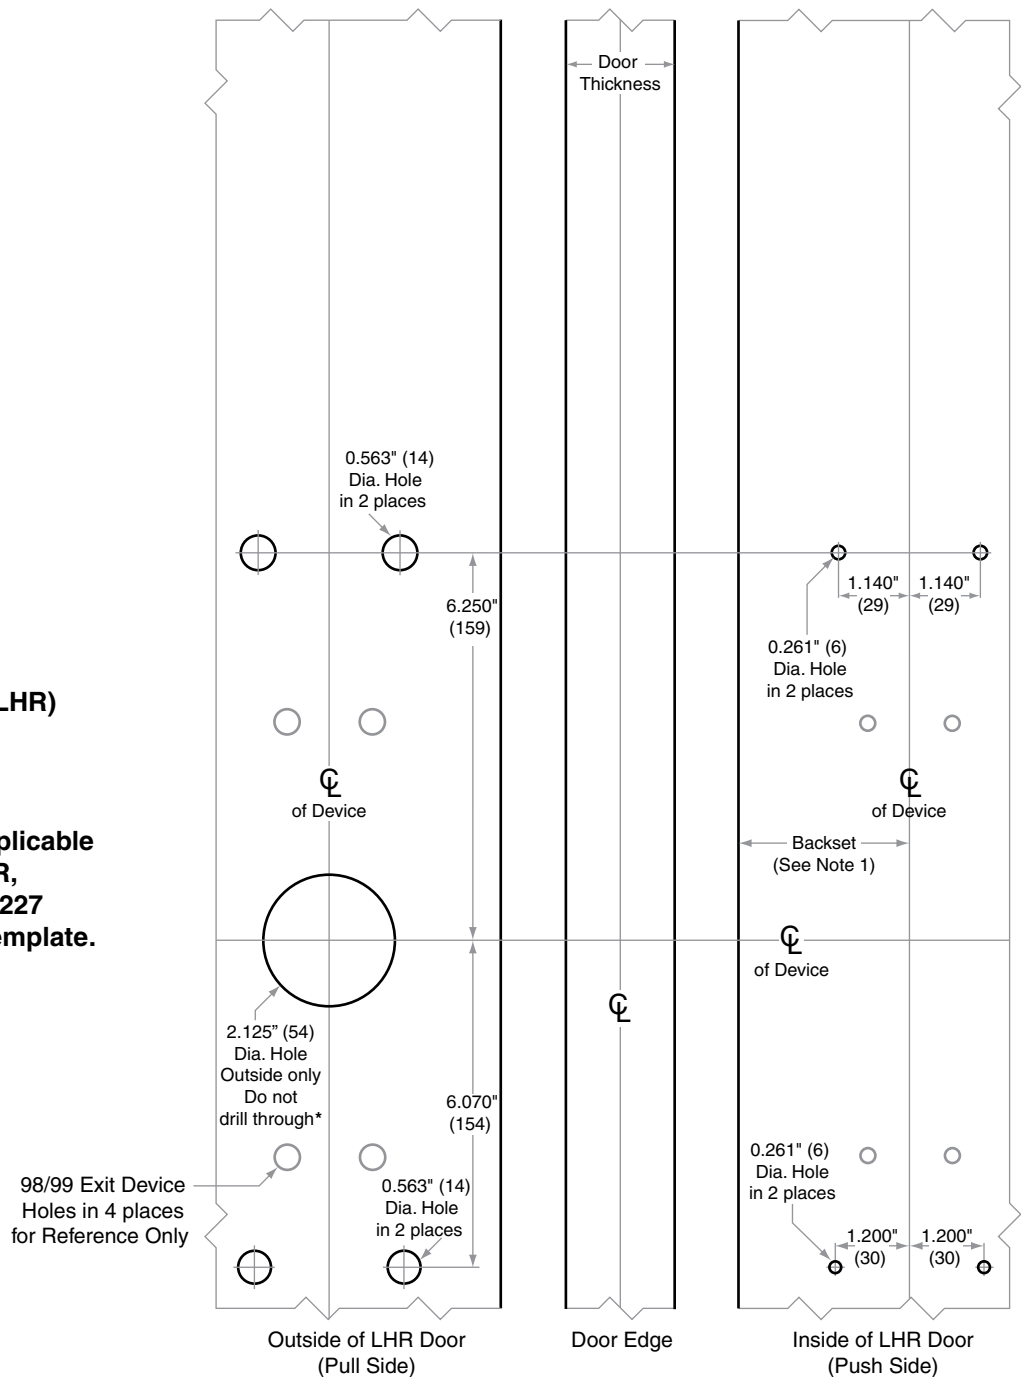

Dimensions shown in parentheses () are in millimeters.

Door preparation template