



48005151

# 785DT/EO/NL

# VON DUPRIN®

Trim for all 78 Series Exit Devices

Installation Instructions

## 1 Prepare door for exit device.

1a See exit device instructions for holes, line X-X, and center lines.


## 2 Prepare door for trim:

2a Transfer vertical center line (line X-X) from inside (exit device side) of door to outside (trim side) of door. Use extra care if edge of door is beveled. Be sure center line is parallel to edge of door.

2b Locate and prepare holes as shown.

## 3 Apply trim.

3a Apply exit device, thru-bolt to trim (4 places), and use screw and #12 countersink washer for lower trim mounting stud.

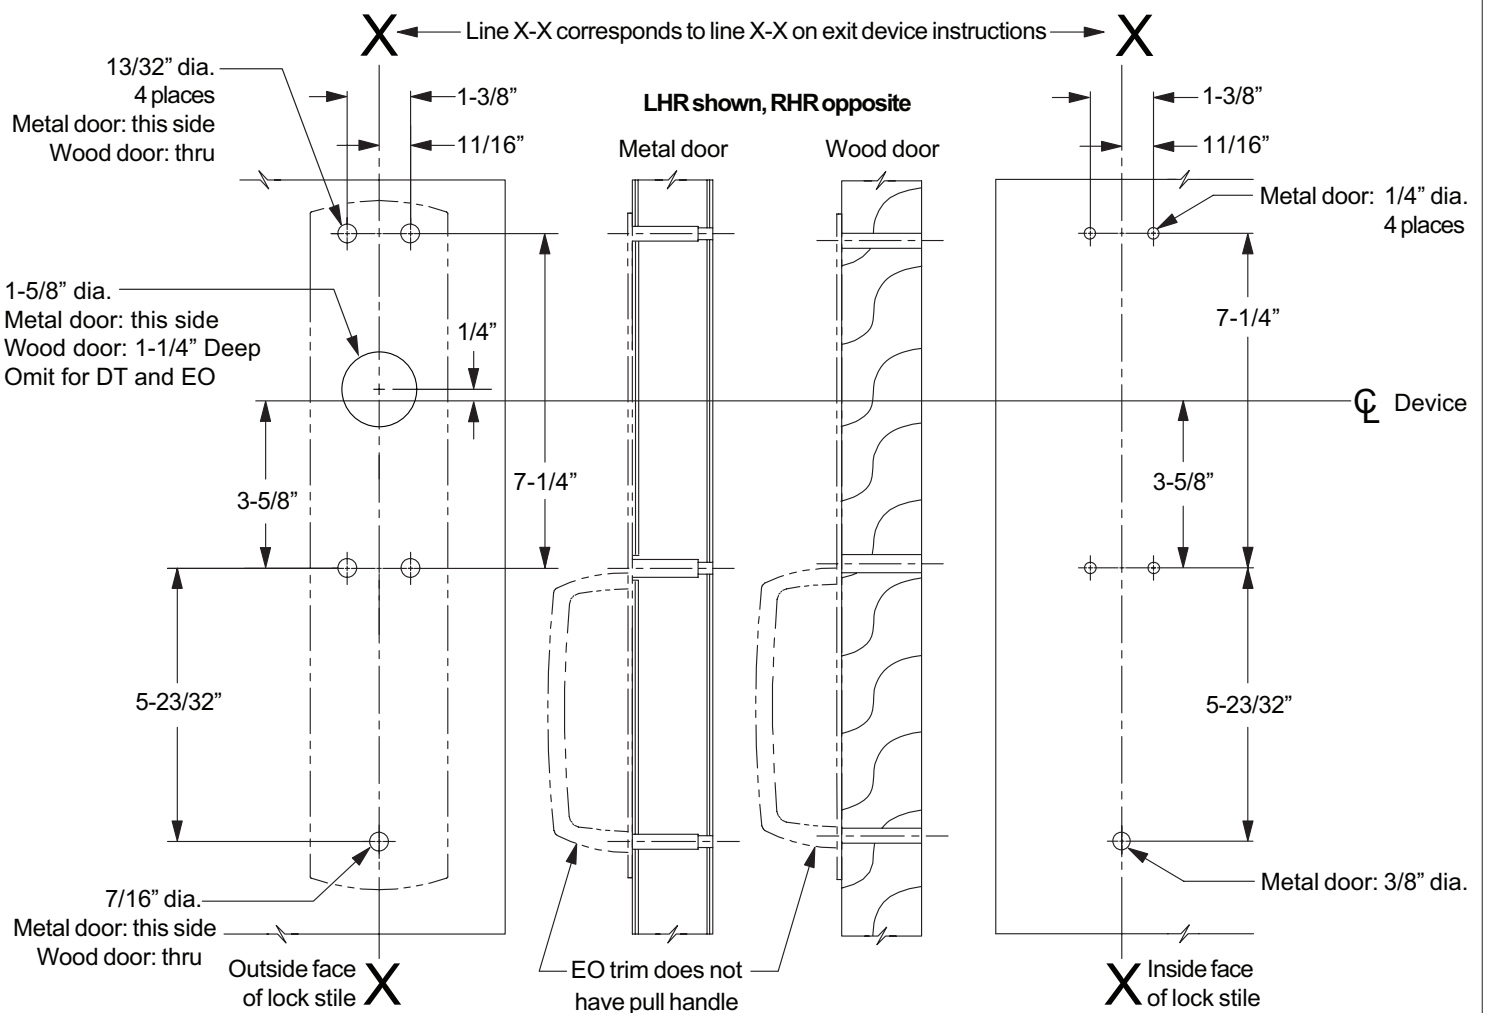

For cutouts on inside face of door, see exit device instructions



Customer Service

1-877-671-7011 www.allegion.com

© Allegion 2024  
Printed in U.S.A.  
48005151 Rev. 04/24-a