




47255387

# Model 339FS Sill Protection Sweep



Installation Instructions

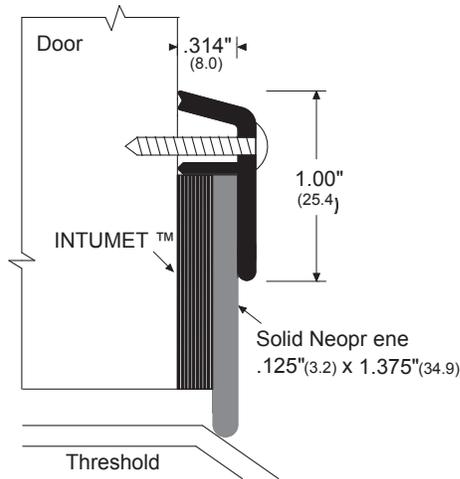

- 1 Measure and cut sweep to fit.
- 2 Close door. Hold sweep making gentle contact with the threshold.
- 3 Mark screw holes. Drill holes using a 2.5mm drill bit.
- 4 Install with screws provided.
- 5 Adjust sweep position to make proper contact with the threshold, allowing smooth operation of the door.

**Note: Product must be installed with Fire Label attached.  
Do not cover Fire Label with paint. Fire Label must be exposed at all times.**



## Customer Service

1-877-671-7011

[www.allegion.com/us](http://www.allegion.com/us)

© Allegion 2016  
Printed in U.S.A.  
47255387 Rev. 11/16-b