
THIS DIAGRAM REPRESENTS A GENERIC CONFIGURATION. CUSTOM WIRING DIAGRAMS CAN BE ACQUIRED BY CONTACTING TECHNICAL SUPPORT

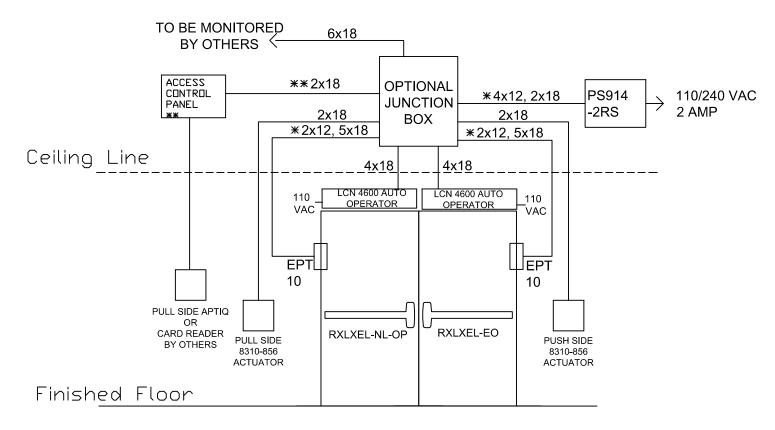

NOTE:

- **★**USE #12 GAUGE WIRE FOR DISTANCES UP TO 200' FROM EPT TO PS914
- *****USE #14 GAUGE WIRE FOR DISTANCES UP TO 100' FROM EPT TO PS914
- ** ADDITIONAL WIRING IS REQUIRED. SEE MANUFACTURER INSTALLATION INSTRUCTION

OPTIONAL JUNCTION BOX IS AVAILABLE FROM VON DUPRIN AS A JB7

1) ALL LOW VOLTAGE WIRING TO BE STANDARD, MULTI-CONDUCTOR COLOR CODED WITHOUT SPLICES.

2) WIRING TO CONFORM TO APPLICABLE NATIONAL, STATE AND LOCAL ELECTRICAL CODES.

- 3) REFER TO SPECIFIC PRODUCT INSTALLATION INSTRUCTIONS FOR SPESCIFIC WIRING REQUIREMENTS.
- 4) THIS DRAWING IS FOR GRAPHICAL REPRESENTATION OF PRODUCTS DETAILED IN THE HARDWARE SET ONLY.
- 5) ADDITIONAL WIRING WILL BE REQUIRED FROM ACP THAT IS NOT SHOWN HERE. CONSULT PROVIDER FOR

HARDWARE USED:

1 RXLXEL ED PANIC 1 RXLXEL-NL-DP PANIC

2 EPT 10

2 8310-856 LCN ACTUATORS

OPERATORS

- 2 4600 AUTO OPERATOR 1 APTIQ OR CARD READER BO WITH ACP BD
- 1 PS914-2RS

PUSH SIDE 8310-856 ACTUATOR TO RETRACT THE ELECTRIC PANIC BARS AND OPEN THE LCN 4600 AUTO OPERATORS.

APTIQ OR CARD READER BY OTHERS TO SIGNAL EL LATCH RETRACTION AND ENABLE EXTERIOR 8310-856 ACTUATOR

PULL SIDE 8310-856 ACTUATOR TO RETRACT THE ELECTRIC PANIC BARS WHEN ENABLED BY CARD READER AND ACCESS CONTROL PANEL

REQUEST EXIT SWITCH RX TO BE MONITORED BY OTHERS.

EL PANICS WITH AUTO

DATE DRAWN 3-26-13 REVISION DATE: 3-26-13

copyright 2013




RXLXEL PAIR WITH LCN 4600 AD AND PS914-2RS

RISER DIAGRAM

109463

B DOVE/D BOLLENGIER

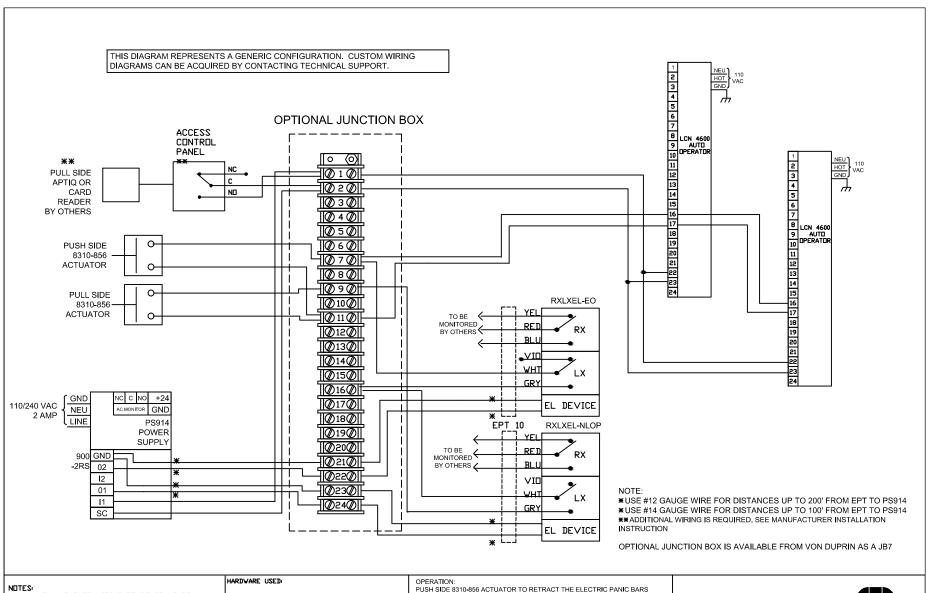

NOTES:
1) ALL LOW VOLTAGE WIRING TO BE STANDARD,
MULTI-CONDUCTOR COLOR CODED WITHOUT SPLICES.

2) WIRING TO CONFORM TO APPLICABLE NATIONAL, STATE AND LOCAL ELECTRICAL CODES.

3) REFER TO SPECIFIC PRODUCT INSTALLATION INSTRUCTIONS FOR SPESCIFIC WIRING REQUIREMENTS.

4) THIS DRAWING IS FOR GRAPHICAL REPRESENTATION OF PRODUCTS DETAILED IN THE HARDWARE SET ONLY.

5) ADDITIONAL WIRING WILL BE REQUIRED FROM ACP THAT IS NOT SHOWN HERE. CONSULT PROVIDER FOR DETAILS.

- 1 RXLXEL ED PANIC
- 1 RXLXEL-NL-OP PANIC
- 2 EPT 10
- 2 8310-856 LCN ACTUATORS
- 2 4600 AUTO OPERATOR
- 1 APTIQ \square R CARD READER \square B WITH ACP \square B \square
- 1 PS914-2RS

PE PAIR EL PANICS WITH AUTO OPERATOR

PUSH SIDE $8310\mbox{-}856$ ACTUATOR TO RETRACT THE ELECTRIC PANIC BARS AND OPEN THE LCN 4600 AUTO OPERATOR.

APTIQ OR CARD READER BY OTHERS TO SIGNAL EL LATCH RETRACTION AND ENABLE EXTERIOR 8310-856 ACTUATOR

PULL SIDE 8310-856 ACTUATOR TO RETRACT THE ELECTRIC PANIC BARS WHEN ENABLED BY CARD READER AND ACCESS CONTROL PANEL

REQUEST EXIT SWITCH RX TO BE MONITORED BY OTHERS.

DATE DRAWN 3-26-13 REVISION DATE: 3-26-13

copyright 2013



ERXEL PAIR WITH LCN 4600 A□
AND PS914-2RS

WIRING DIAGRAM

109463

WN/CHECKED BY:

B DOVE/D BOLLENGIER