FALCON®

Strikes

10-087, Q330-148, Q001-047, A21315, A12316, A21317, 020568, 020569, 020318, 020319, 5161, 5164

Jamb Type:	Metal
Style:	Square Corner, ANSI and Mortise
Standard for:	B-Series | M-Series | RU-Series | T-Series | W-Series | X-Series
Optional for:	D100/D200-Series | H-Series | Y-Series

NOTE:
1. Strike box furnished detached or 10-072 and 10-087, but not required as Plaster Guard is furnished by frame mfr.
2. Strike location on frames must be adjusted for thickness of door silencers when used

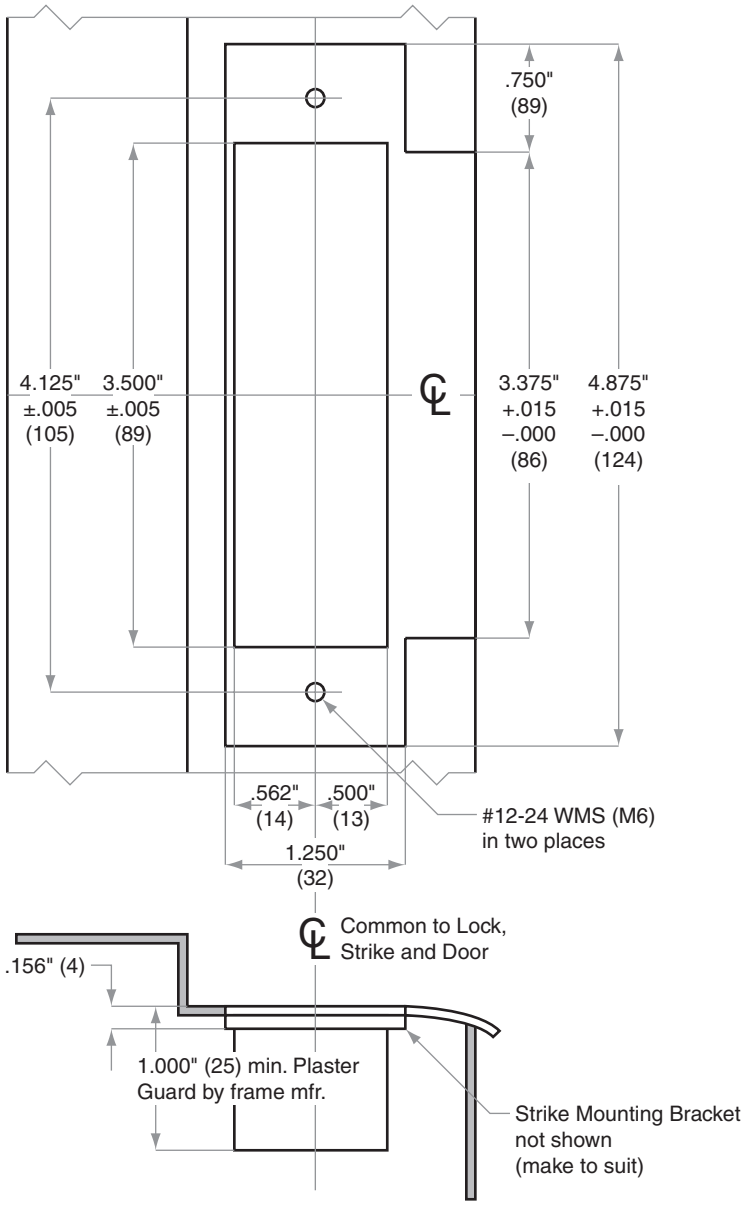

Dimensions shown in parentheses ( ) are in millimeters.

Door preparation template

FJ114

© 2014 Allegion
FJ114 Rev. 07/14
www.allegion.com/us