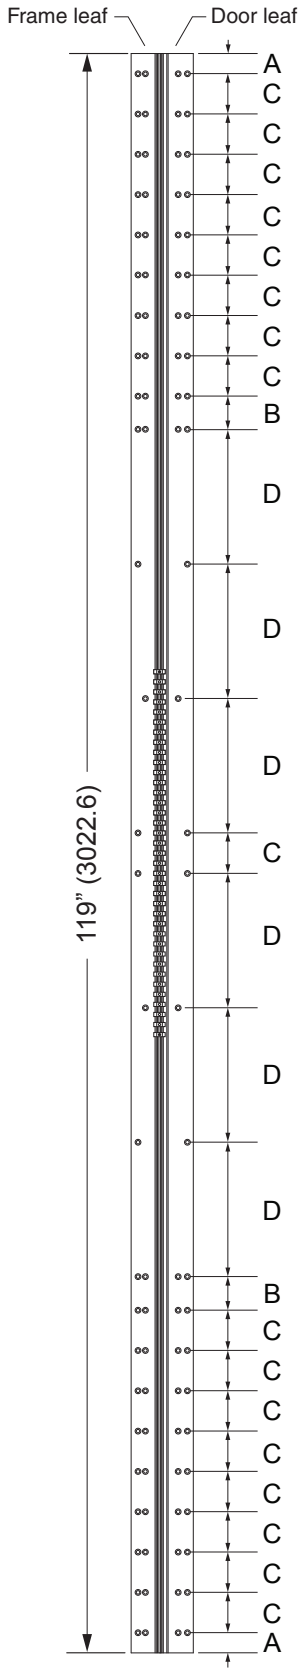

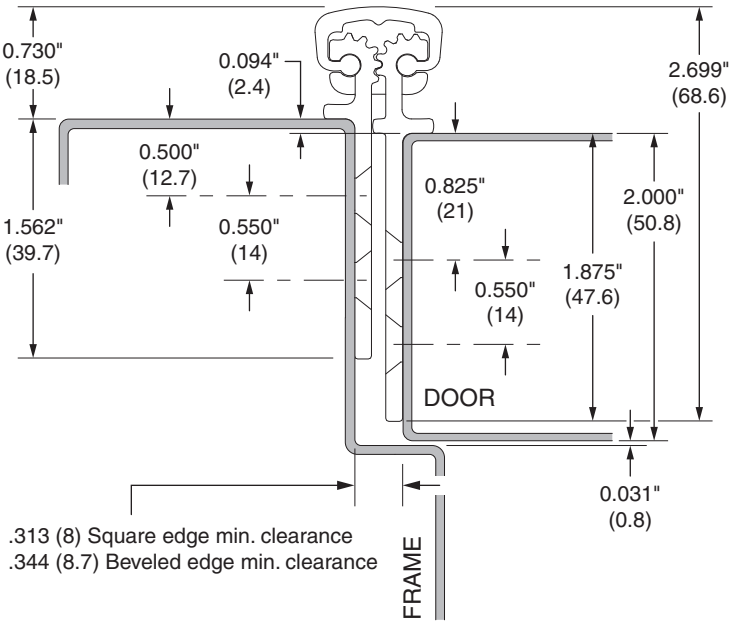

Total Door Undersizing

Single Square Edge Door - 15/32"
Single Bevel Edge Door - 1/2"
Pair of Doors, each leaf, Square Edge Door - 7/16"
Pair of Doors, each leaf, Bevel Edge Door - 15/32"

See installation instructions for reinforcement requirements.

Hole Preparation

Metal Frame:
#12-24 x 3/4" self-drilling tapping screws
#16 pilot drill is recommended for all holes

Wood Frame:
1/8" pilot drill

Vertical distance between holes

	A	B	C	D
Inch	1.50”	2.50”	3”	10”
mm	38.1	63.5	76.2	254.0

IVES

026XY 119" FULL MORTISE
CONCEALED, NARROW FRAME
CONTINUOUS HINGE TEMPLATE

ALLEGION

NOTE: DIMENSIONS IN ( ) ARE IN MILLIMETERS

TEMPLATE NUMBER: 829711(B)

Date: 8-12-16