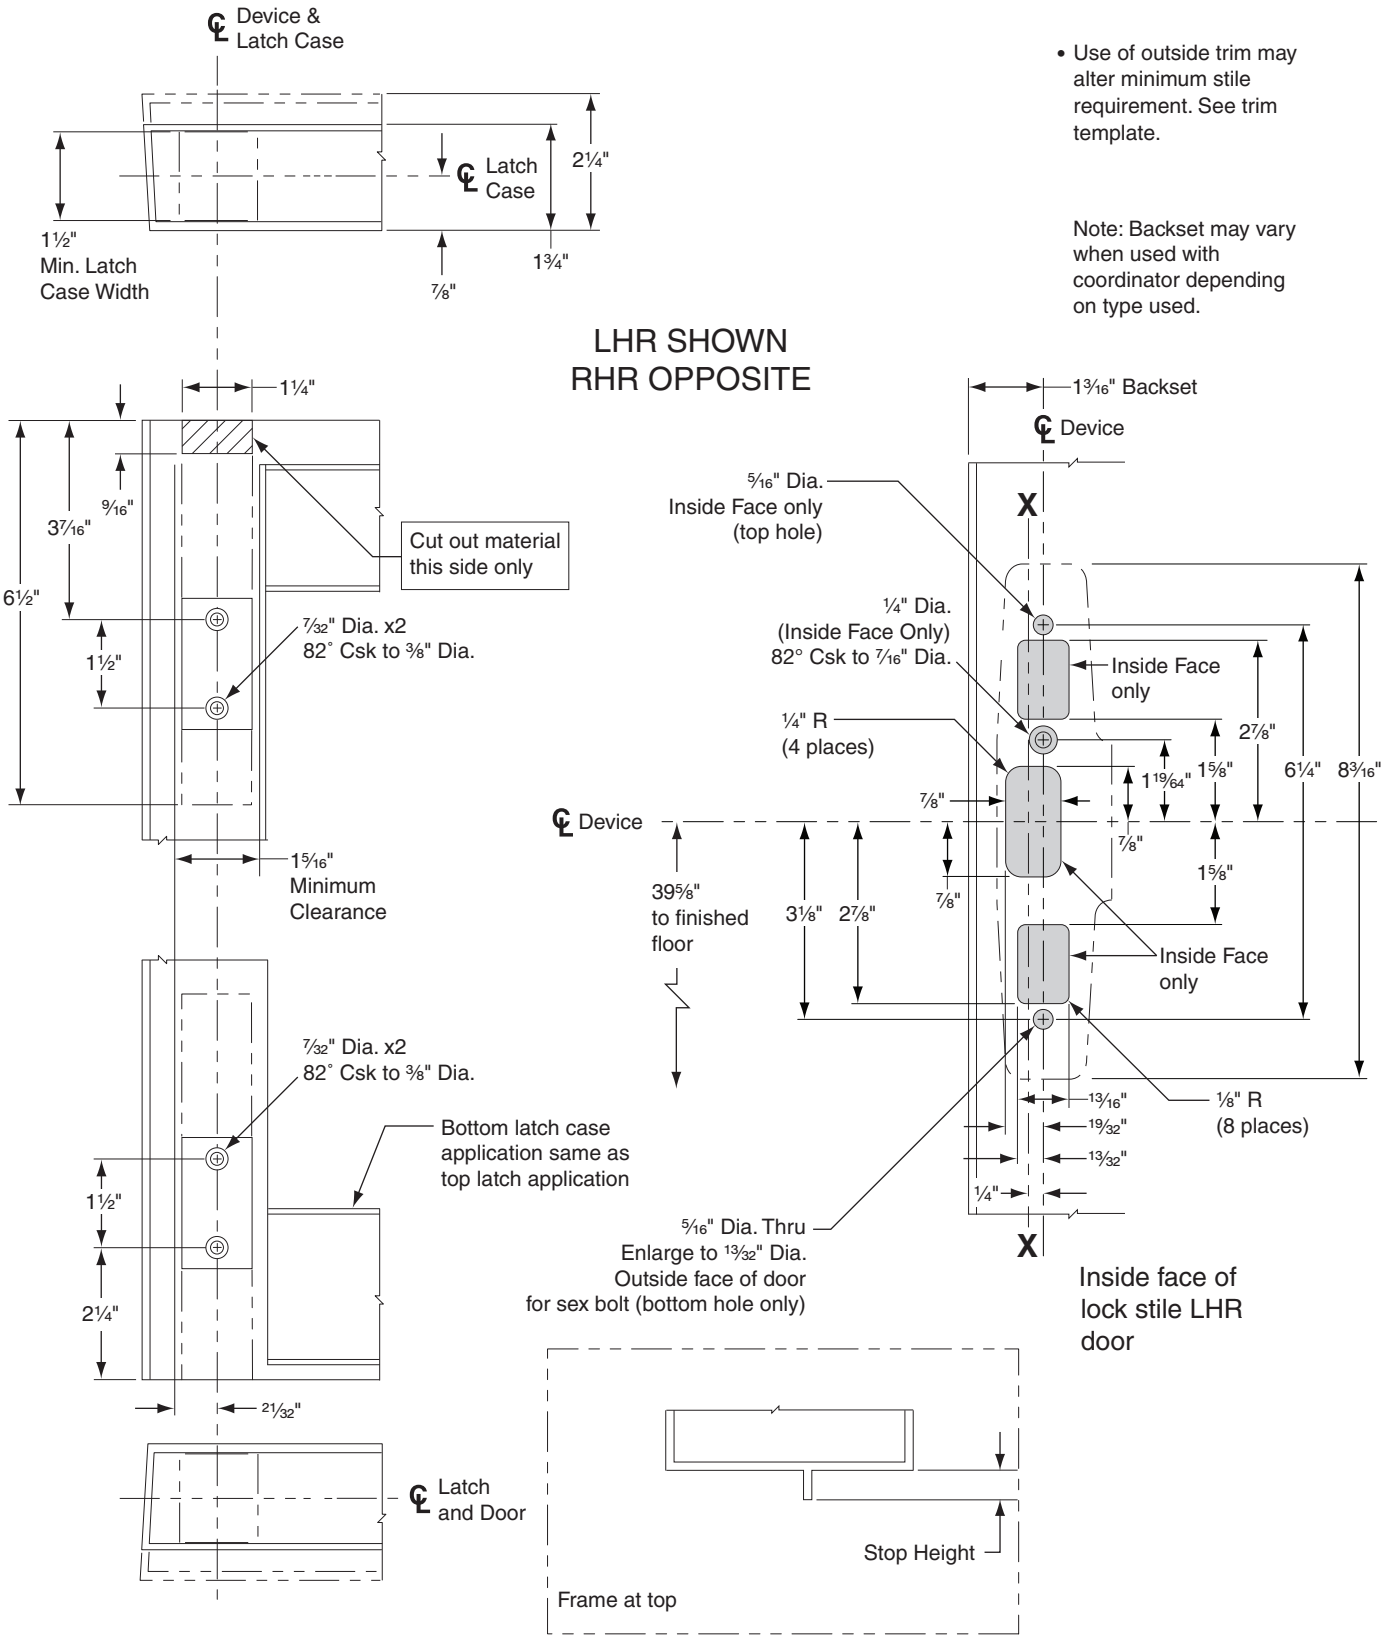

- Use of outside trim may alter minimum stile requirement. See trim template.

Note: Backset may vary when used with coordinator depending on type used.

- Glass bead kit available when required
- It is recommended the mounting holes be prepared in the field
- For outside trim preparation, when required see additional trim template
- Device cannot be used on Kawneer 260 aluminum door

33/3549A CONCEALED VERTICAL DEVICE
FOR 2" STILE ON PAIR OF ALUMINUM DOORS

VON DUPRIN®

TEMPLATE NUMBER:	24081200_e	DATE:	9-16-16