



**Installation Instructions**

- Secure the TM-100 base to table, pedestal or any other flat surface using #10 hardware.

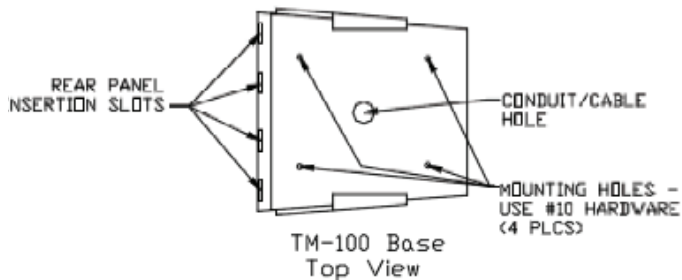


Note: If the reader is to be mounted near a wall, a minimum of four (4) inches must be maintained between the rear edge of the base and the wall.


- If you plan to route cable through the base, insert cables up through the conduit/cable hole in the base. Guide the cables out past the rear edge of the TM-100 base.

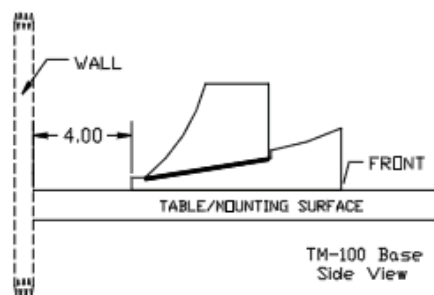

- Slide the Handreader into the base. If the base is mounted near a wall the reader must be rotated into position.

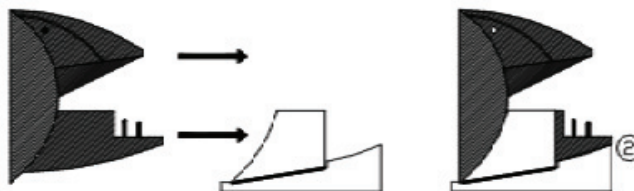


Note: Make sure the upper lip on the base (A) snaps under the lower lip of the Handreader (B).

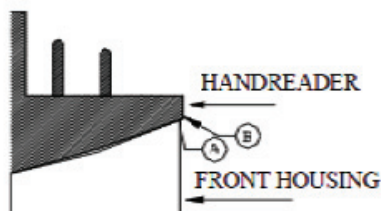


- 4. If you have not routed cabling through the base, insert cables through the conduit / cable hole in the rear panel. Connect the cables to the proper jacks on the Handreader. (See Handreader Installation Manual)


OR

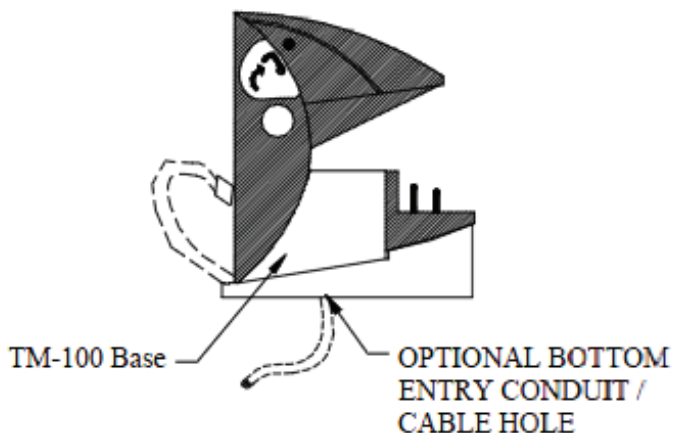


- 5. Insert the rear panel into the base. Align tabs on rear panel with slots on the base.

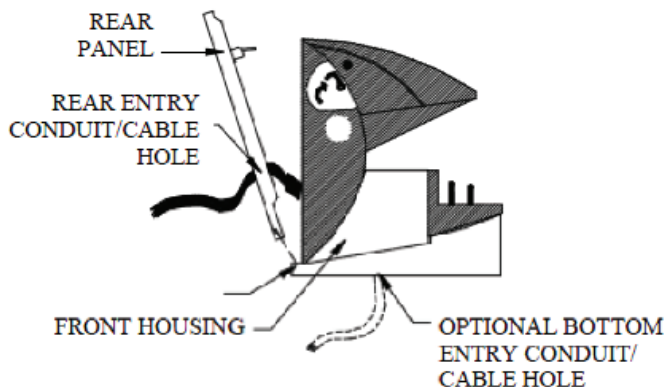

6. Make sure the Handreaders lock is in the open position. While guiding the cables rotate the rear panel into the back of the Handreader.

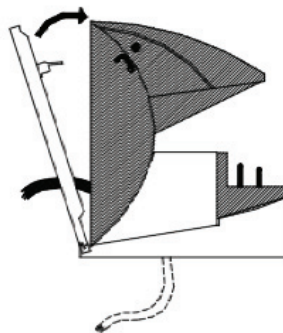

7. Hold the rear panel against the Handreader making sure that the rear panel has fit into the base properly. Rotate the Handreaders lock into the locked position.

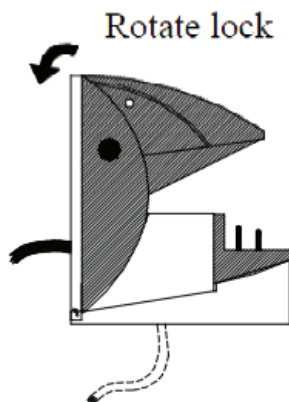

Installation of the TM-100 is complete.