

24908394

QEL 33A/35A, 98/99 Series


VON DUPRIN®

Baseplate Conversion Kit Installation Instructions




- 1. This kit converts all 33/35A and 98/99 series EL devices and fire devices built prior to Oct. 2014 to quiet electric latch (QEL) retraction devices.
- 2. QELX and HD-QELX Baseplate Conversion Kits are only for use with Von Duprin AX98/99, AXXP98/99, and AX33A/35A exit devices only. They are not to be used to convert standard exit devices to QELX.
- 3. Install according to instructions or device will not function and panic or fire label will be void.
- 4. The QEL wiring must be attached to the fire alarm system if installed on fire exit hardware.

Parts

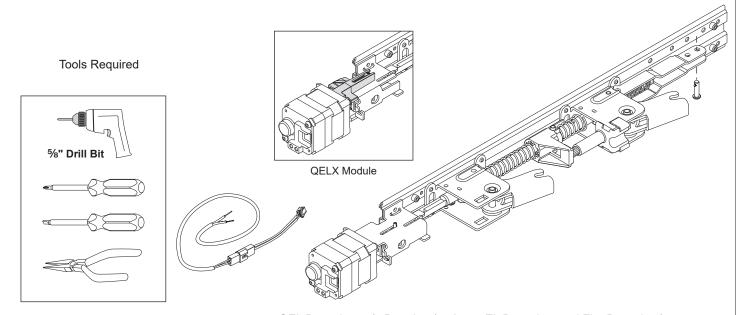

QEL Baseplate w/o Dogging (replaces EL Baseplate and Fire Baseplate)

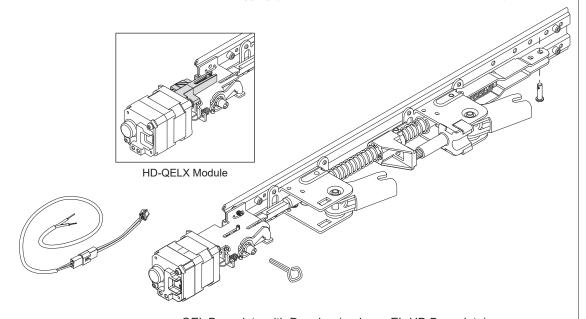

QEL Baseplate with Dogging (replaces EL-HD Baseplate)

🛕 WARNING 🛕

If existing exit device is fire rated, do not install HD-QEL or HD-QELX (hex dogging) baseplate. Doing so will void fire rating.


🛕 Disconnect Power 🛕

To avoid risk of shock, disconnect AC power from power supply before proceeding with this conversion. If using Battery Backup option, unplug all four wires from battery terminals.

Detach Vertical Rods if present


Refer to device instructions as needed.

Remove Exit Device from Door

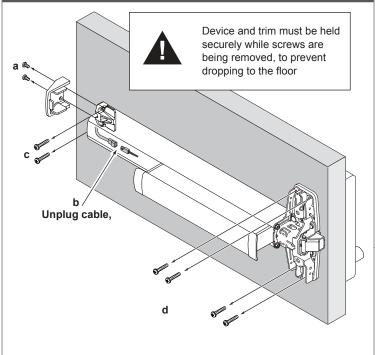



4 Remove Old Baseplate Assembly


Remove Mechanism Case

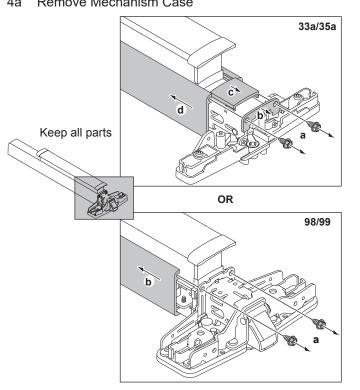


Remove Pushpad From Baseplate.

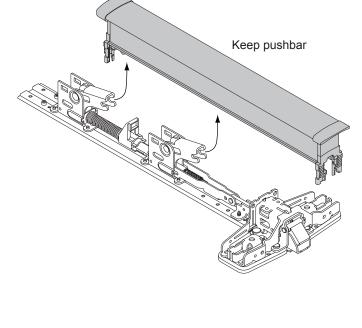

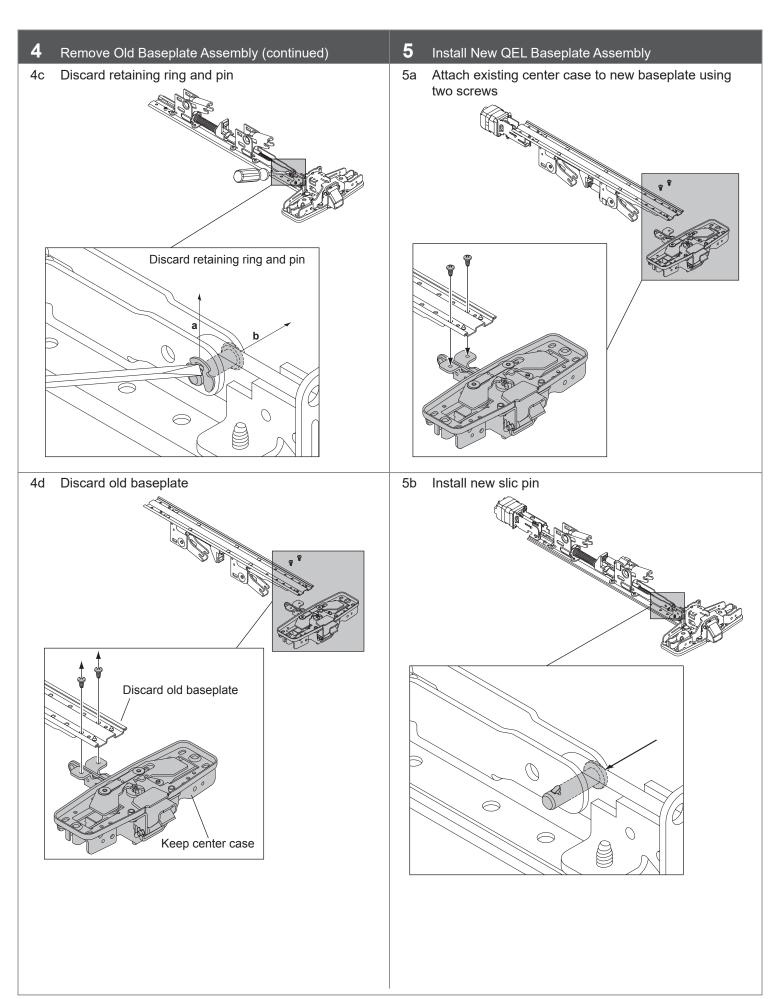

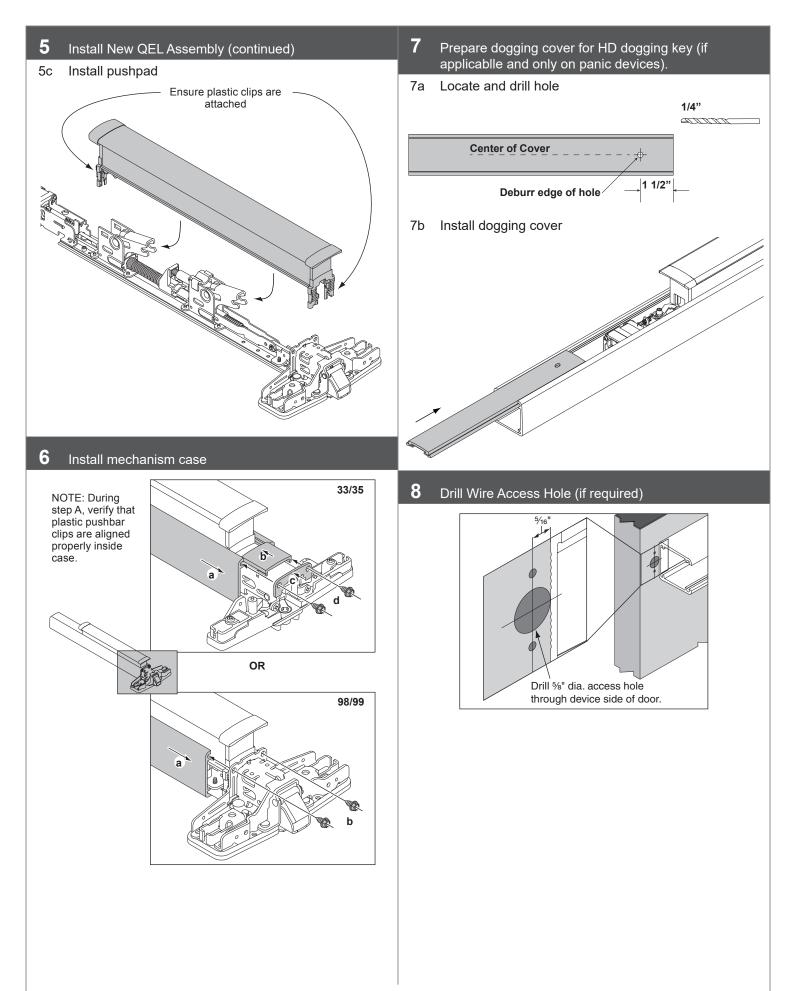

9 Attach Exit Device to Door

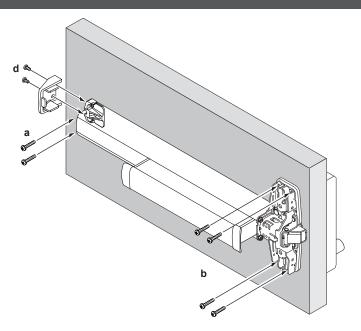


For more detailed installation instructions for specific Exit Devices, visit the Support area of the Allegion website at www.allegion.com/us

10 Confirm Equipment Compatibility


The QEL is compatible with the following equipment (refer to individual instructions as needed):


- PS900-SERIES POWER SUPPLIES PS902, PS904, PS906, PS914
- 900-SERIES OPTION BOARDS 900-2RS, 900-4R, 900-4RL, 900-2Q
- PS873 POWER SUPPLY PLUS 871-2, 871-2Q, 873-4TD/AO OPTION BOARDS

11 Route Two Wires from QEL Exit Device to Power Supply

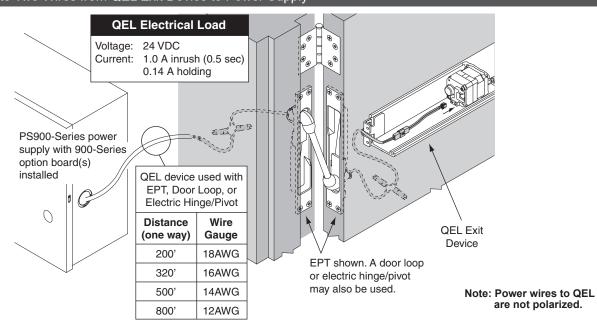

12 Install 900-2Rs, 4Rl, or 4R Option Board(s) into Power Supply

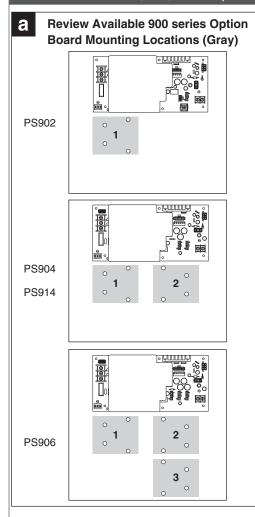


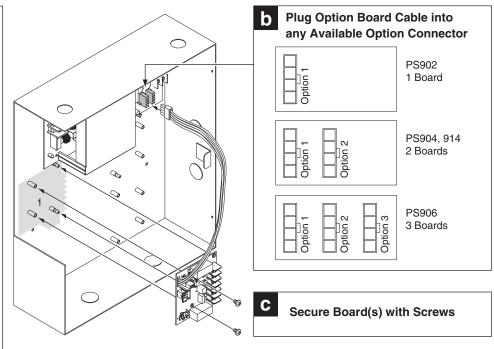


Notes: 1. 24VDC output setting required when QEL device connected

- 2. If installing board in location 2 or 3, rotate board 180°
- 3. The QEL is compatible with an existing 900-2Q board if currently installed.
- 4. Latchbolt retraction of (2) sequenced QEL's requires more than 1 second to complete.
- When powering multiple components, verify that the amperage requirements of all components combined does not exceed the power supply output rating.

13 Connect Input and Output Wires to Option Board (2RS Shown)

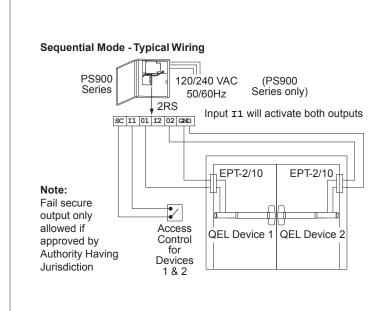

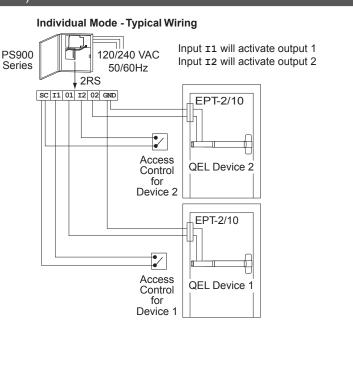


14 Check Operation

- A. Activate each input and verify all QEL devices operate properly.
- B. If any device does not operate properly, see step 15 for troubleshooting.

15 If Necessary, Troubleshoot Operation (LED is only visible with the mechanism cover removed)

Power at the QEL	QEL Response	Condition/Solution
24VDC	LED - Solid green Latchbolt - retracted	Operation normal, latch retracted immediately
	LED - Solid red after latchbolt attempts to retract multiple times	Latchbolt cannot fully retract mechanically
		Verify mechanical adjustment (on vertical rod or mortise lock devices if used). Remove and reapply input voltage to reset this condition.*
		See Check Mechanical Operation on page 8 as needed.**
	LED - Flashing green/red Latchbolt - not retracted	Excessive tamper (while power applied, the pushpad was pulled out at least 3 time)
		Wait 15 seconds and latchbolt will retract again OR remove and reapply power to clear condition
24VDC low	LED - Flashing green Latchbolt - retracted	Voltage low during latchbolt retraction (latchbolt retracts at reduced force) Wire length is too long, wire gauge is too small or power supply has poor regulation
29VDC or		Input voltage is too high for proper operation
greater		Wrong power supply, power supply defective.
	LED- Flashing red Latchbolt - will not retract	Input voltage is too low for proper operation
13VDC or lower		Wrong power supply, power supply defective or not set to the proper output voltage.
		To set, remove AC power from power supply, change power supply setting from 12 to 24VDC, then reapply AC power and verify proper operation.
0VDC	LED - off	No input voltage
	Latchbolt - not retracted	Problem with the power supply, control switch or wiring
0VDC	LED - off	No input voltage
	Latchbolt - retracted	Mechanical dogging is engaged

^{*}For information about adjusting exit devices, you can find their installation instructions in the support area at www.allegion.com/us or call Technical Services at 1-877-671-7011

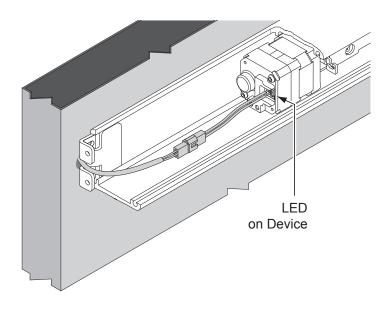

16 Check Mechanical Operation

33A/3527A	98/9927	98/9947WDC
33A/3547A	98/9947	98/9957
		98/9975

- 1. Make sure device is not dogged for SD-QEL / HD-QEL.
- 2. Depress pushbar and make sure latch bolt retracts and extends fully (see Figure 1).
- 3. If latch bolt does not retract or extend fully, adjustments may be required per the device installation instructions.

33A/3527A, 98/9927, 9	8/9957				
Latch bolt deadlocked stays re (will not push in) with door closed					
33A/3547A, 98/9947, 98/9947WDC					
Latch bolt deadlocked Value 5%8" 1	(will not push in) Flush within ½6" Latch bolt retracted				
98/9975					
Latch bolt extended	Latch bolt retracted Flush within 1/16"-				
Figure 1					

33/3549A	98/9949
33/3550A-WDC	98/9949WDC
	98/9950WDC

- 1. Make sure device is not dogged for SD-QEL/HD-QEL.
- 2. Depress pushbar. Door should begin to open with pushbar depressed halfway.
- 3. Close door. Top latch should be secure. If two point latch, bottom latch should be secure as well.
- If device does not function as described in steps 2 and 3, adjustments may be required per the device installation instructions.

Any HD Device

- 1. Fully depress pushbar.
- 2. Insert hex dogging key and turn clockwise.
- 3. Release pushbar and verify latchbolt remains retracted.
- 4. Fully depress pushbar.
- 5. Insert hex dogging key and turn counter clockwise.
- 6. Release pushbar and verify latchbolt extends fully.