




47255397

Model 8452 Wheelchair Accessible Shower Threshold



Installation Instructions

- 1 Measure and cut threshold and rubber to size needed.
- 2 Place threshold in its final resting position. Mark the holes to be drilled on the floor through the mounting holes in threshold with a pencil. Remove threshold.
- 3 Drill the mounting holes on the floor with a hammer drill and 1/4" masonry bit. Insert anchors into the holes.
- 4 Caulk underneath and around edges of the threshold.
- 5 Place threshold (with rubber inserted in one channel) to floor surface. Insert mounting screws and fasten with a screwdriver.

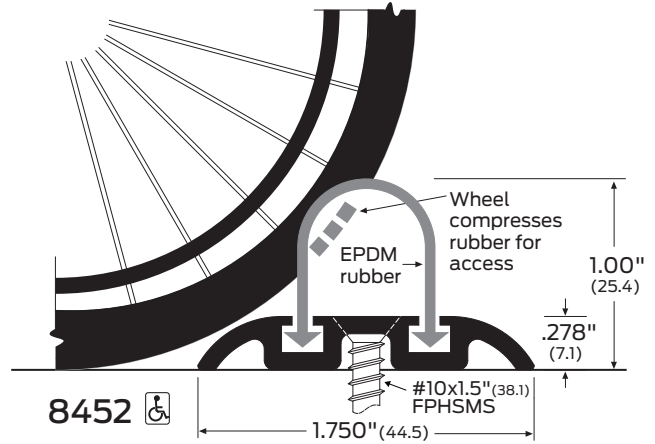

- 6 Press in the other edge of rubber into the second channel using your thumb or a screwdriver.



Customer Service

1-877-671-7011

www.allegion.com/us

© Allegion 2019
Printed in U.S.A.
47255397 Rev. 07/19-c