DWG. NO. 2004

# TEMPLATE

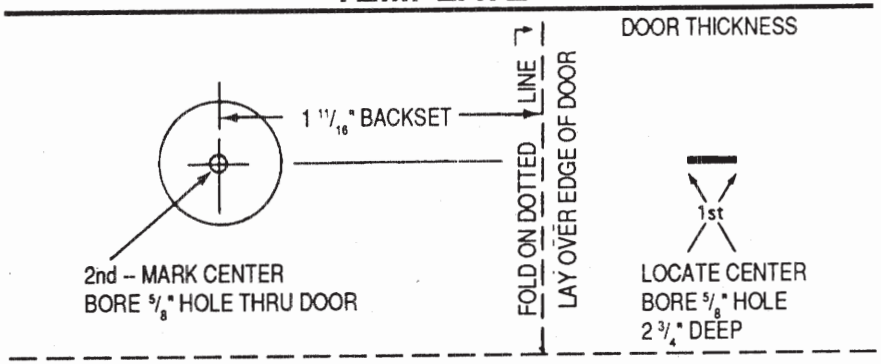


TEAR OFF TEMPLATE HERE

## INSTALLATION INSTRUCTIONS

CAUTION. INSTALL ABOVE HEIGHT OF ENTRANCE SET ON APPLICATIONS WITH NARROW JAMBS.

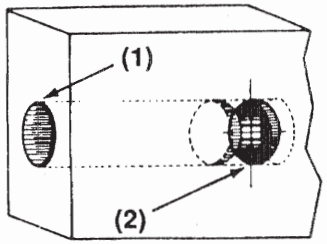


FOLD TEMPLATE AND PLACE ON DOOR AT HEIGHT DESIRED.

MARK EDGE AND FACE OF DOOR AT POINTS 1 AND 2.

USING 5/8" DRILL BIT, BORE HOLE #1 IN EXACT CENTER OF EDGE OF DOOR A FULL 2 3/4" DEEP.

USING SAME BIT (5/8"), BORE HOLE #2 THROUGH DOOR.

TO INSTALL STRIKE: MARK FRAME OPPOSITE CENTER POINT OF LATCHBOLT WITH 5/8" BIT. DRILL HOLE 5/16" DEEP.

SEE OPPOSITE SIDE FOR INSTRUCTIONS FOR MOUNTING LATCH.

## 980 STORM DOOR LATCH - For Doors 7/8" to 1 3/8" Thick

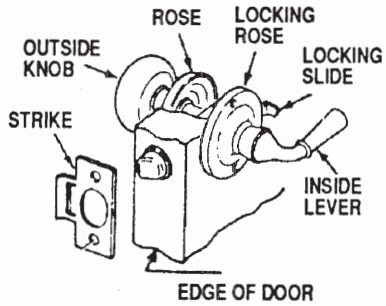


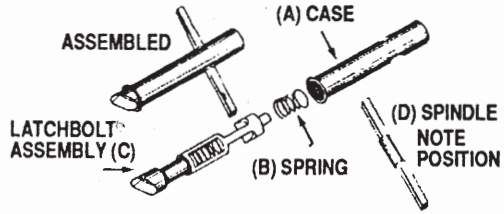


## INSTRUCTIONS FOR INSTALLING LATCHBOLT ASSEMBLY

1) Insert case (A) in hole bored in edge of door. Place spring (B) inside case. 2) Insert latch bolt assembly (C) in case and depress with finger enough to allow spindle (D) to pass through cross hole of case. Insert spindle through hole #2 (see reverse) and pass through case. Note position of spindle. 3) Place roses on spindle. Screw knob and lever onto spindle until they stop on roses. Position roses so that screw holes are lined up vertically and the locking slide is away from edge of door. Mark rose screw hole locations on both sides of door. 4) Remove knob, lever and roses. Drill pilot holes for screws with 1/16" drill bit. 5) Secure roses to door. Screw knob and lever onto spindle until they stop on roses. Tighten set screws located on shank of knob and lever. 6) Install strike on frame exactly opposite center point of latch bolt. Secure with 2 flat head screws provided.

ALLEGION

© Allegion 2015
Printed in U.S.A.
DWG2004 Rev. 05/15-b

**Customer Service**
1-877-671-7011 www.allegion.com/us

TEMPLATE DIMENSIONS MUST BE TO SCALE
PRINT WITH BLACK INK ON TWO SIDED 4.75 X 5.50 SHEET

| SYM | DESCRIPTION | DATE | DWN. |
|---|---|---|---|
| | | | |
| | | | |
| | | | |

REVISIONS

| MATERIAL | WHITE PAPER | | |
|---|---|---|---|
| DIMENSIONAL TOLERANCES UNLESS OTHERWISE SPECIFIED | | | |
| XXX | XX | FRAC | ANG |
| ±.005 | ±.010 | ±.020 | ±1° |
| SCALE 1:1 | | CAD FILE NAME: N/A | |

PRODUCT AND NAME P/N 133695
980 TEMPLATE AND INSTALLATION INSTRUCTIONS
DRAWN FJ HARRIS DATE 6-12-97
APPROVED DATE
IVES