



941137-00

Control


# 373L-DT

# VON DUPRIN®

Installation Instructions

1. Prepare door for exit device. See exit device instructions for locations of holes, line X-X, and center lines.
2. Prepare door for control:
  - A. Transfer line X-X from inside (exit device) side of door to outside (control side) of door. Use extra care if edge of door is beveled. Be sure vertical center line is parallel to edge of door.
  - B. Locate and prepare holes as shown.
3. Apply control.
4. Apply exit device.

Device Application Schedule	
Device	Dimension "A"
44K Rim	5"
88K Rim	5"
8827K	3-1/2"
8827K-F	3-1/2"
8875	3-1/4"

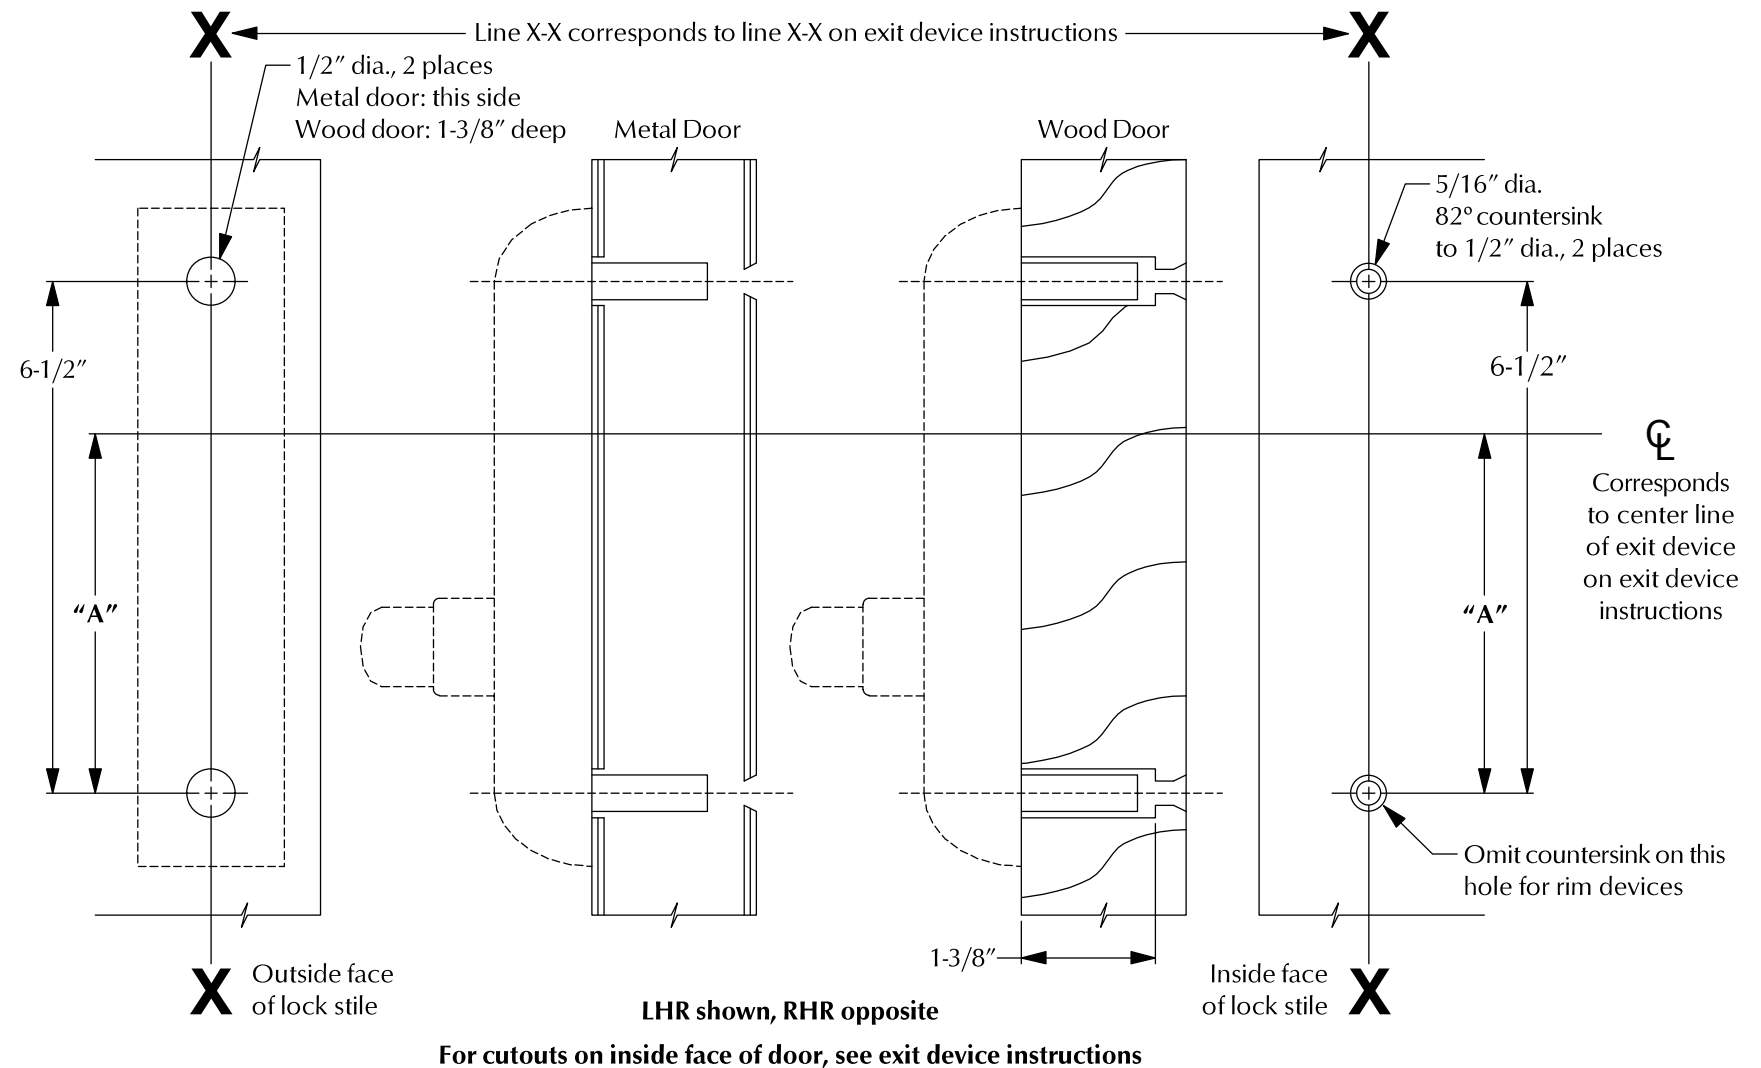

**Customer Service**  
 1-877-671-7011    www.allegion.com/us



© Allegion 2014  
 Printed in U.S.A.  
 941137-00 Rev. 01/14-b