



17577

# Cush Shoe Support


# LCN®

Instructions for installing after Cush - N - Stop is installed


Installation Instructions

If frame is not wide enough to receive fifth screw, install Cush Shoe Support (available from Dealer) as shown below.

- 1a Set Cush Shoe Support on top of Cush Shoe and hold against frame.
- 1b Assemble screw, washer, and nut as shown and tighten securely.
- 1c Using Shoe Support as Template drill & tap two 1/4-20 holes in frame.
- 1d Insert screw & tighten securely.

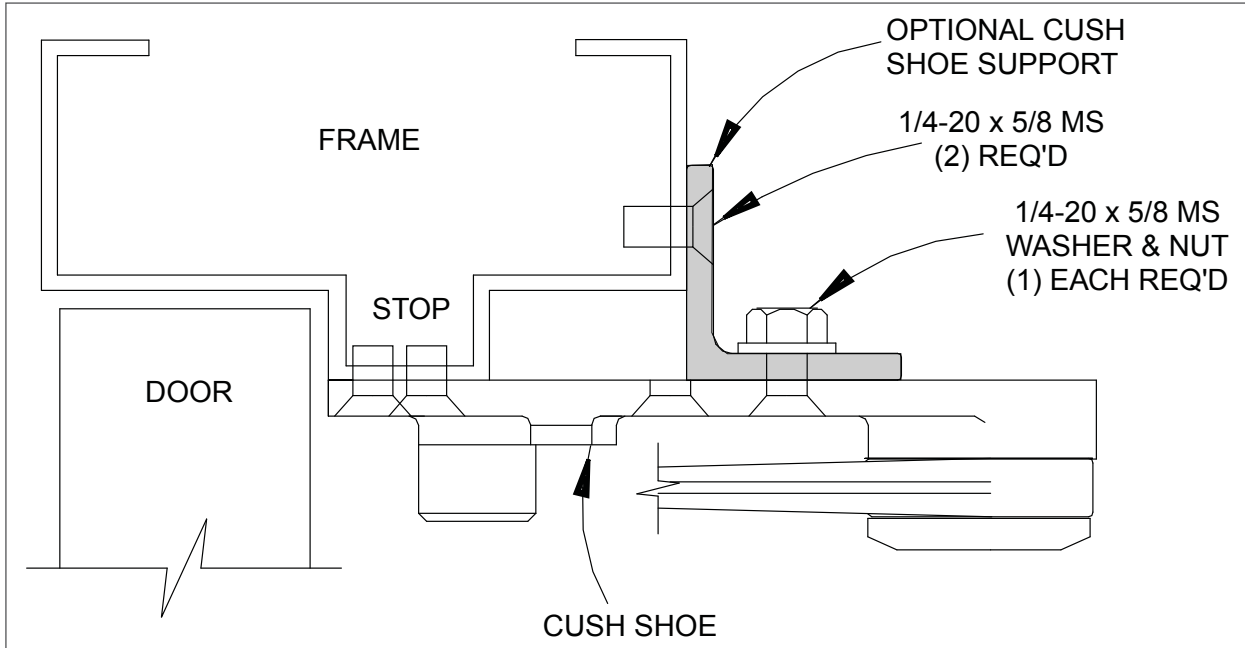

Should frames have 1/2" Blade Stop it is necessary to use 1/2" Blade stop Spacer (available from Dealer). Use both Blade Stop Spacer and Shoe Support wherever required.

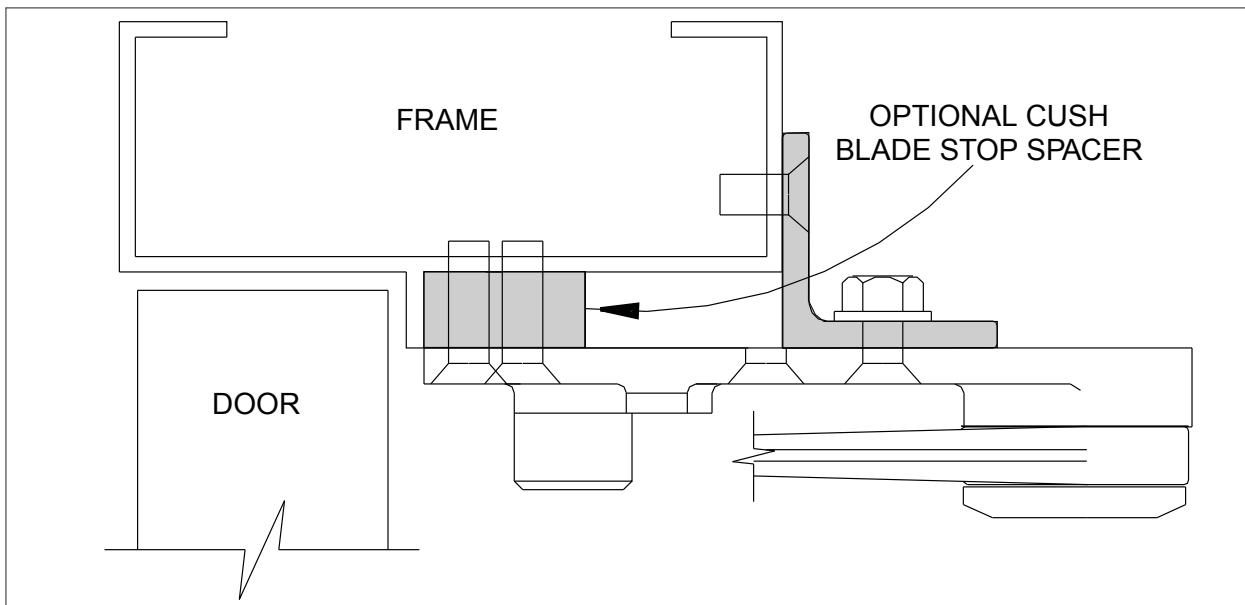


Customer Service


1-877-671-7011 www.allegion.com/us



© Allegion 2014  
Printed in U.S.A.  
17577 Rev. 01/14-e

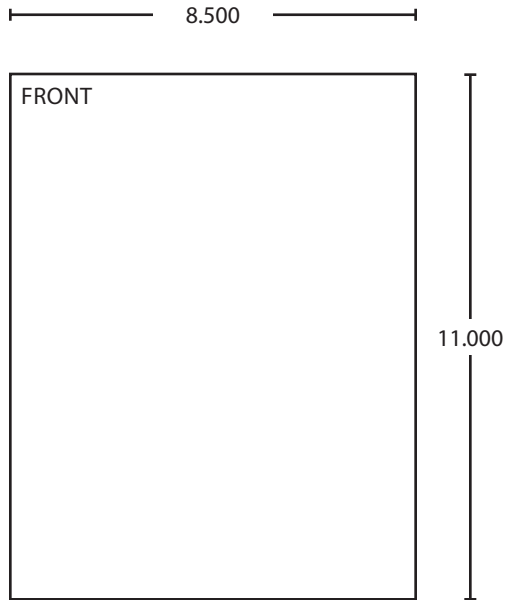

BEGINNING SHEET

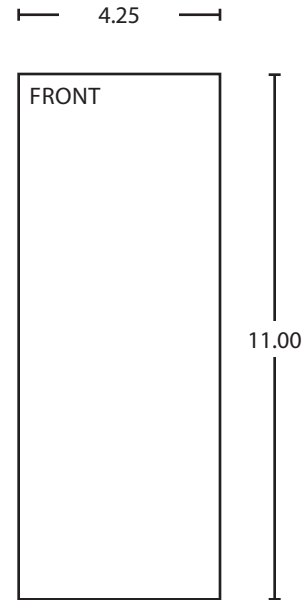

FOLDED SHEET

Additional Notes:
1. None

Revision History						Revision Description: E > Revised artwork				
E	F	G	H	J	K					
043228										
Material White Paper						Edited By	Approved By	EC Number	Release Date	
						D. Myers	M. Sasso	043228	01-01-14	
Notes 1. printed one side 2. printed black 3. tolerance ± .13 4. printed in country may vary 5. drawings not to scale						Title Cush Shoe Support Instruction Sheet				
						Creation Date 05-10-10	Number 17577		Revision E	
						Created By N/A	Activity 3899 Hancock Expwy Security, CO 80911			
						Software: InDesign CS6				© Allegion 2014