



941095-00

ES 5547 Retrofit Kit

VON DUPRIN®

Installation Instructions


If New Door, Follow Steps 2 through 11

If Retrofitting New Latch onto Existing Door, Follow Steps 1 through 11


1

- 1a. Remove door from frame.
- 1b. Remove device from door.
- 1c. Remove top and bottom guides.
- 1d. Remove top and bottom rods.


Top

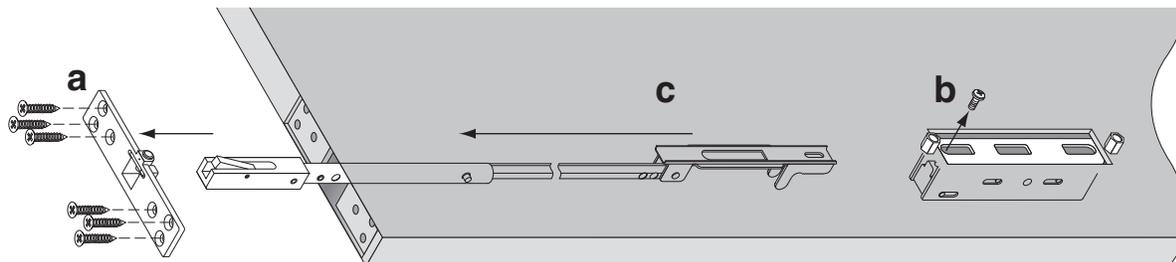


Bottom

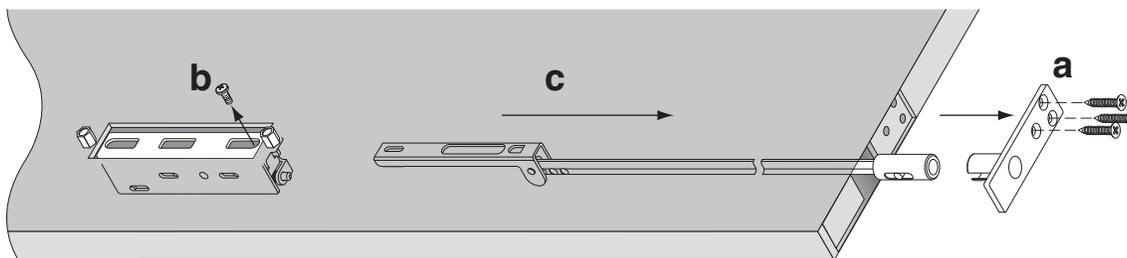

2

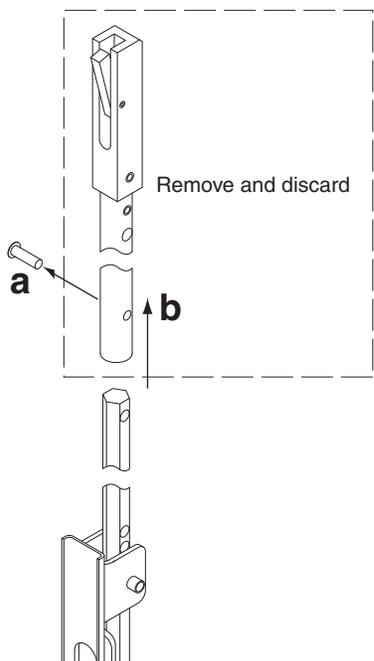

3


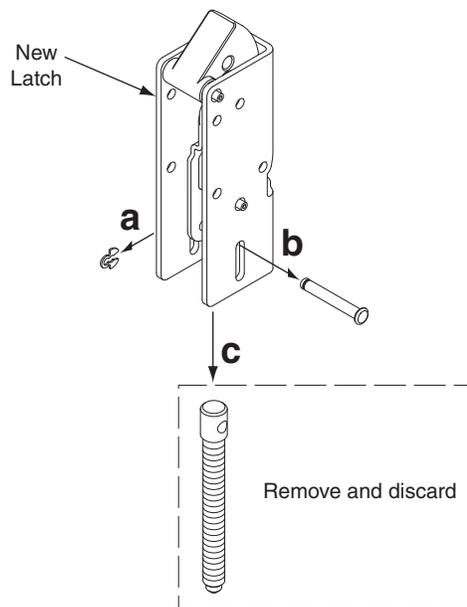


Customer Service




1-877-671-7011

www.allegion.com/us

© Allegion 2015
Printed in U.S.A.
941095-00 Rev. 2/15-b

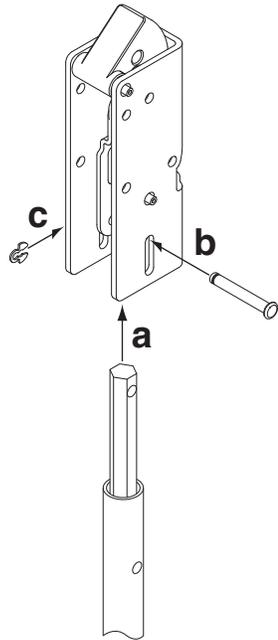
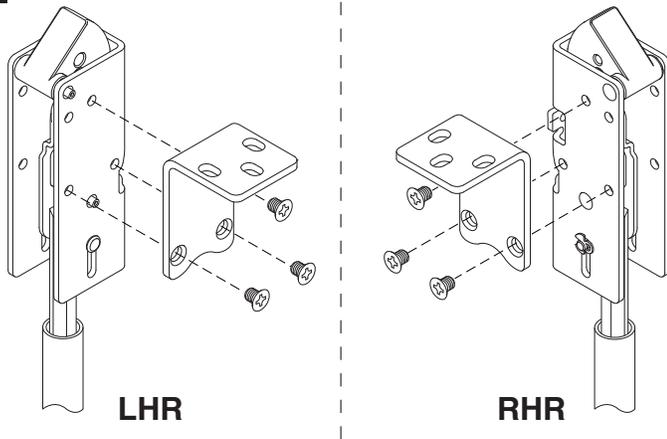
4**5****6****Assemble Rod**

See instruction 941901-00 for door height adjustment.

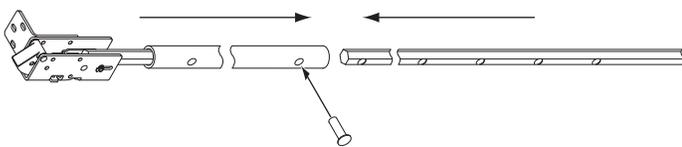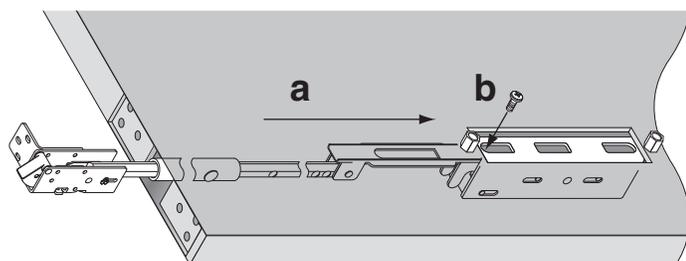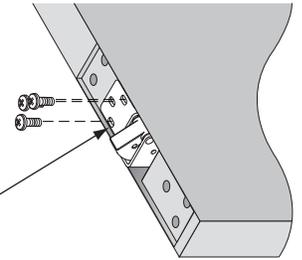
**7****Install Top Rod and Latch Assembly****8****Secure Latch****9****Install Exit Device per Device Installation Instructions****10****Check Rod Adjustment**

If top latch does not function as shown below, go to step 11.

With pushbar out, latch bolt should extend $\frac{5}{8}$ "

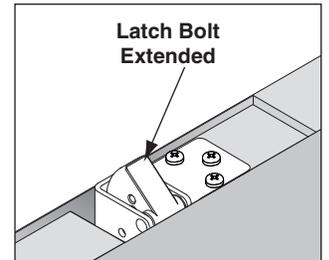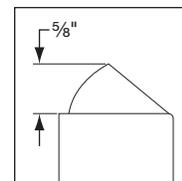

With pushbar depressed, latch bolt should be flush with top edge

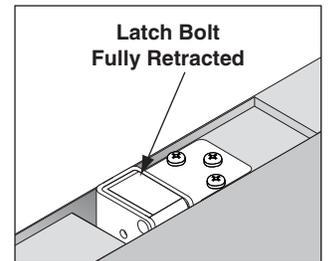**11****Adjust Rod, if Necessary**

11a. Remove exit device from door.

11b. Loosen adjustment screw as shown below.

Note: Refer to Step 10 for correct adjustment.

11c. Adjust rod position up or down as needed and tighten screw.

11d. Reinstall exit device.

